



Presents

Repair Manuals from **SELOC**[®]

CONTENTS

1	GENERAL INFORMATION, SAFETY & TOOLS	HOW TO USE THIS MANUAL	1-2
		BOATING SAFETY	1-4
		BOATING EQUIPMENT	1-10
		SAFETY IN SERVICE	1-12
		TROUBLESHOOTING	1-13
		SHOP EQUIPMENT	1-16
		TOOLS	1-18
		FASTENERS, MEASUREMENT, AND CONVERSIONS	1-26
		SPECIFICATIONS	1-27

2	MAINTENANCE & TUNE-UP	GENERAL INFORMATION	2-2
		LUBRICATION	2-4
		ENGINE MAINTENANCE	2-9
		BOAT MAINTENANCE	2-17
		TUNE-UP	2-20
		TIMING & SYNCHRONIZING	2-28
		CLEARING A SUBMERGED MOTOR	2-54
		SPECIFICATIONS	2-55

3	FUEL SYSTEM	FUEL SYSTEMS	3-2
		CARBURETOR SERVICE	3-7
		FUEL PUMP	3-34
		SPECIFICATIONS	3-40

4	IGNITION & ELECTRICAL	UNDERSTANDING & TROUBLESHOOTING ELECTRICAL SYSTEMS	4-2
		FLYWHEEL	4-11
		IGNITION - GENERAL	4-15
		TYPE I IGNITION SYSTEMS - FLYWHEEL MAGNETO, BATTERY-TYPE & MAGNAPOWER I	4-22
		TYPE II IGNITION SYSTEM - MAGNAPOWER II	4-28
		TYPE III IGNITION SYSTEMS - CD, PRESTOLITE & MAGNAPOWER III	4-34
		TYPE IV IGNITION SYSTEM - UNITS WITH DISTRIBUTOR	4-44
		CHARGING SYSTEM	4-55
		STARTER MOTOR CIRCUIT	4-58
		AUTO ELECTRIC SYSTEM	4-68
		SENDERS & SWITCHES	4-70
		WIRING DIAGRAMS	4-72

5	COOLING SYSTEM	COOLING SYSTEM	5-2
----------	-----------------------	----------------	-----

CONTENTS

POWERHEAD
SPECIFICATIONS

6-2
6-34

POWERHEAD

6

LOWER UNIT
PROPELLER
LOWER UNIT TYPE "A"
(CONSTANT MESH - NO SHIFT)
LOWER UNIT TYPE "B"
(ONE PIECE - CAM SHIFT, F-N, OR F-N-R)
LOWER UNIT TYPE "C"
(ONE PIECE - COUPLER SHIFT, F-N-R)
LOWER UNIT TYPE "D"
(TWO-PIECE - CAM OR COUPLER SHIFT, F-N-R)
SPECIFICATIONS

7-2
7-6
7-8
7-14
7-23
7-38
7-52

LOWER UNIT

7

TRIM/TILT SYSTEMS
EARLY MODEL TRIM/TILT SYSTEM
LATE MODEL TRIM/TILT SYSTEM

8-2
8-4
8-9

TRIM & TILT

8

REMOTE CONTROL BOX

9-2

REMOTE CONTROLS

9

HAND REWIND STARTER

10-2

HAND REWIND STARTER

10

MASTER INDEX

10-19

MASTER INDEX

ANCHORS	1-10	CLEANING & INSPECTION	3-29
2-STROKE OIL	2-8	REMOVAL & DISASSEMBLY	3-27
OIL RECOMMENDATIONS	2-8	CARBURETOR "F" - AMAL	3-34
PRE-MIXING FUEL	2-8	CARBURETOR MODELS	3-3
ANODES (ZINCS)	2-15	CARBURETOR SERVICE	3-7
INSPECTION	2-15	GENERAL INFORMATION	3-7
SERVICING	2-16	CARBURETOR "A" - WALBRO LMB	3-7
AUTO ELECTRIC SYSTEM	4-68	CARBURETOR "B" - TILLOTSON MT	3-12
ASSEMBLY & INSTALLATION	4-69	CARBURETOR "C" - TILLOTSON MD	3-16
CHECKING THE STARTING SYSTEM	4-68	CARBURETOR "D" - TILLOTSON CO, TC AND WB	3-20
CHECKING CHARGING SYSTEM OUTPUT	4-68	CARBURETOR "E" - WALBRO WE	3-27
CLEANING & INSPECTION	4-69	CARBURETOR "F" - AMAL	3-34
DESCRIPTION	4-68	CHARGING SYSTEM	4-55
REMOVAL & DISASSEMBLY	4-68	DESCRIPTION & OPERATION	4-55
AVOIDING TROUBLE	1-2	RECTIFIER/REGULATOR	4-55
BAILING DEVICES	1-10	STATOR SERVICE	4-57
BASIC ELECTRICAL THEORY	4-2	TROUBLESHOOTING	4-55
HOW ELECTRICITY WORKS: THE WATER ANALOGY	4-2	CHEMICALS	1-17
OHM'S LAW	4-2	CLEANERS	1-18
BASIC OPERATING PRINCIPLES	1-13	GENERAL INFORMATION	1-17
COMBUSTION	1-16	LUBRICANTS & PENETRANTS	1-17
GENERAL INFORMATION	1-13	SEALANTS	1-17
2-STROKE MOTORS	1-13	CHOKE SOLENOID	4-71
4-STROKE MOTORS	1-15	TESTING	4-71
BATTERY		CIRCUIT BREAKER	4-72
CABLES	4-11	TESTING	4-72
CHARGERS	4-11	CLEARING A SUBMERGED MOTOR	2-54
CONSTRUCTION	4-10	COMPASS	1-10
LOCATION	4-10	INSTALLATION	1-11
MAINTENANCE	2-17	PRECAUTIONS	1-11
MARINE	4-9	SELECTION	1-10
PRECAUTIONS	4-11	COMPRESSION TESTING	2-21
RATINGS	4-10	COMPRESSION CHECK	2-21
STORAGE	2-19	LOW COMPRESSION	2-22
TESTING	2-18	COOLING SYSTEM	5-2
BEFORE/AFTER EACH USE	2-3	DESCRIPTION & OPERATION	5-2
GENERAL INFORMATION	2-3	FLUSHING	2-9
VISUALLY INSPECTING	2-3	THERMOSTAT	5-6
BOAT MAINTENANCE	2-17	TROUBLESHOOTING	5-2
BATTERIES	2-17	WATER PUMP	5-3
FIBERGLASS HULL	2-19	COURTESY MARINE EXAMINATIONS	1-10
INTERIOR	2-20	DIRECTIONS & LOCATIONS	1-2
BOATING EQUIPMENT	1-10	EARLY MODEL TRIM/TILT SYSTEM	8-4
ANCHORS	1-10	SERVICE	8-4
BAILING DEVICES	1-10	TRIM/TILT COMPONENTS	8-5
COMPASS	1-10	ELECTRICAL COMPONENTS	4-2
FIRST AID KIT	1-10	CONNECTORS	4-4
OAR/PADDLE	1-10	GROUND	4-3
TOOLS & SPARE PARTS	1-12	LOAD	4-4
VHF-FM RADIO	1-10	POWER SOURCE	4-2
BOATING SAFETY	1-4	PROTECTIVE DEVICES	4-3
COURTESY MARINE EXAMINATIONS	1-10	SWITCHES & RELAYS	4-3
GENERAL INFORMATION	1-4	WIRING & HARNESSES	4-4
REGULATIONS FOR YOUR BOAT	1-4	ELECTRICAL SYSTEM CHECKS	2-27
REQUIRED SAFETY EQUIPMENT	1-5	BATTERY	2-27
BREAKER POINTS	2-27	INTERNAL WIRING HARNESS	2-27
CAN YOU DO IT?	1-2	STARTER MOTOR	2-27
CARBURETOR "A" - WALBRO LMB	3-7	ELECTRONIC TOOLS	1-23
ASSEMBLY & INSTALLATION	3-10	BATTERY CHARGERS	1-23
CLEANING & INSPECTION	3-7	BATTERY TESTERS	1-23
REMOVAL & DISASSEMBLY	3-7	GAUGES	1-24
CARBURETOR "B" - TILLOTSON MT	3-12	MULTI-METERS (DVOMS)	1-23
ASSEMBLY & INSTALLATION	3-14	ENGINE MAINTENANCE	2-9
CLEANING & INSPECTION	3-13	ANODES (ZINCS)	2-15
REMOVAL & DISASSEMBLY	3-12	COOLING SYSTEM	2-9
CARBURETOR "C" - TILLOTSON MD	3-16	FUEL FILTER	2-10
ASSEMBLY & INSTALLATION	3-18	FUEL/WATER SEPARATOR	2-11
CLEANING & INSPECTION	3-17	PROPELLER	2-12
REMOVAL & DISASSEMBLY	3-16	EXPLODED VIEWS	6-22
CARBURETOR "D" - TILLOTSON CO, TC AND WB	3-20	TYPICAL 1-CYL	6-23
ASSEMBLY & INSTALLATION	3-24	TYPICAL 4.4-8 HP	6-23
CLEANING & INSPECTION	3-23	TYPICAL 9-15 HP	6-24
REMOVAL & DISASSEMBLY	3-21	TYPICAL 20-30 HP	6-24
CARBURETOR "E" - WALBRO WE	3-27	TYPICAL 35-65 HP	6-25
ASSEMBLY & INSTALLATION	3-30	TYPICAL 4-CYL (3-CYL IDENTICAL W/O THE EXTRA CYL)	6-25

10-20 MASTER INDEX

FASTENERS, MEASUREMENTS AND CONVERSIONS	1-26
BOLTS, NUTS & OTHER THREADED RETAINERS	1-26
STANDARD & METRIC MEASUREMENTS	1-27
TORQUE	1-27
FIBERGLASS HULL	2-19
INSPECTION & CARE	2-19
FIRE EXTINGUISHERS	1-6
CARE & TREATMENT	1-6
CONTENTS OF EXTINGUISHERS	1-6
FIRE EXTINGUISHER APPROVAL	1-6
HALON EXTINGUISHERS	1-6
LEGAL REQUIREMENTS	1-6
USING A FIRE EXTINGUISHER	1-6
FIRST AID KIT	1-10
FLYWHEEL	4-11
FLYWHEEL ASSEMBLY	4-11
FLYWHEEL ASSEMBLY	4-11
CLEANING & INSPECTION	4-14
INSTALLATION	4-14
REMOVAL	4-11
FUEL/WATER SEPARATOR	2-11
DRAINING	2-11
GENERAL INFORMATION	2-11
SERVICING	2-11
FUEL FILTER	2-10
GENERAL INFORMATION	2-10
RELIEVING PRESSURE	2-10
REMOVAL & INSTALLATION	2-11
FUEL PUMP	3-34
DESCRIPTION & OPERATION	3-34
FUEL PUMP	3-35
FUEL SYSTEMS	3-2
CARBURETOR MODELS	3-3
FUEL SYSTEM	3-4
GENERAL INFORMATION	3-2
INTRODUCTION	3-2
TROUBLESHOOTING	3-5
FUEL PUMP	3-34
ASSEMBLY & INSTALLATION	3-38
CLEANING & INSPECTION	3-38
DESCRIPTION & OPERATION	3-34
PRESSURE CHECK	3-35
REMOVAL & DISASSEMBLY	3-36
SERVICE	3-35
FUEL SYSTEM	3-4
GENERAL INFORMATION	3-4
LEADED GASOLINE AND GASOHOL	3-4
REMOVING FUEL FROM THE SYSTEM	3-4
FUEL SYSTEM CHECKS	2-28
FUEL INSPECTION	2-28
HAND REWIND STARTER	10-2
INTRODUCTION	10-2
TYPE "A" HAND REWIND STARTER	10-2
TYPE "B" HAND REWIND STARTER	10-7
TYPE "C" HAND REWIND STARTER - MOUNTED VERTICALLY	10-11
HAND TOOLS	1-19
BREAKER BARS	1-20
HAMMERS	1-22
PLIERS	1-21
SCREWDRIVERS	1-21
SOCKET SETS	1-19
TORQUE WRENCHES	1-20
WRENCHES	1-21
HOW TO USE THIS MANUAL	1-2
AVOIDING COMMON MISTAKES	1-3
AVOIDING TROUBLE	1-2
CAN YOU DO IT?	1-2
DIRECTIONS & LOCATIONS	1-2
GENERAL INFORMATION	1-2
MAINTENANCE OR REPAIR?	1-2
PROFESSIONAL HELP	1-3
PURCHASING PARTS	1-3

WHERE TO BEGIN	1-2
HYDRAULIC PUMP & ELECTRIC MOTOR - LATE MODELS	8-14
ASSEMBLY	8-16
CLEANING & INSPECTION	8-15
PUMP DISASSEMBLY	8-14
REMOVAL & INSTALLATION	8-14
IGNITION - GENERAL	4-15
INTRODUCTION	4-15
POLARITY CHECK	4-16
SPARK PLUG EVALUATION	4-15
TESTING	4-19
TROUBLESHOOTING	4-17
WIRING HARNESS	4-17
IGNITION TIMING	2-45
1976-79 AND 1983-84 35 HP	2-45
ALL MODELS W/TIMING MARKS ON FLYWHEEL	2-46
35 HP (1964-75 & 1980-82), 45 HP (1965-84), 50 HP (1965-66 & 1981-84) & 55 HP (1967-76) MODELS	2-48
55 HP (1977-83), 60 HP (1974-76 & 1984), 65 HP (1977-78) MODELS AND ALL 4-CYLINDER MODELS W/O DISTRIBUTOR	2-50
MODELS WITH DISTRIBUTOR	2-51
IGNITION SWITCH	4-70
TESTING	4-70
INTAKE MANIFOLD	6-8
CLEANING & SERVICE	6-9
GENERAL INFORMATION	6-8
REMOVAL & INSTALLATION	6-9
INTERIOR	2-20
INSPECTION & CARE	2-20
KILL SWITCH	4-71
TESTING	4-71
LATE MODEL TRIM/TILT SYSTEM	8-9
HYDRAULIC PUMP & ELECTRIC MOTOR	8-14
PURGING AIR FROM SYSTEM	8-9
SERVICE	8-13
TESTING TRIM/TILT SYSTEM	8-10
TRIM CYLINDER, TILT CYLINDER & SHOCK ABSORBER	8-17
TRIM/TILT SENDING UNIT	8-20
TROUBLESHOOTING	8-9
LOWER UNIT	7-2
DESCRIPTION & OPERATION	7-2
DRAINING	2-7
FILLING	2-7
OIL RECOMMENDATIONS	2-6
TROUBLESHOOTING	7-4
LOWER UNIT TYPE "A" (CONSTANT MESH - NO SHIFT)	7-8
ASSEMBLY	7-13
CLEANING & INSPECTING	7-12
DISASSEMBLY	7-9
SEPARATING LOWER UNIT FROM INTERMEDIATE HOUSING	7-8
WATER PUMP REMOVAL & INSTALLATION	7-9
LOWER UNIT TYPE "B" (ONE PIECE - CAM SHIFT, F-N OR F-N-R)	7-14
ASSEMBLY	7-21
CLEANING & INSPECTION	7-20
DISASSEMBLY	7-16
SEPARATING LOWER UNIT FROM HOUSING & MOTOR LEG EXTENSION	7-14
WATER PUMP REMOVAL & INSTALLATION	7-15
LOWER UNIT TYPE "C" (ONE PIECE - COUPLER SHIFT, F-N-R)	7-23
ASSEMBLY	7-32
CLEANING & INSPECTION	7-30
DISASSEMBLY	7-25
SEPARATING LOWER UNIT FROM INTERMEDIATE HOUSING	7-23
SHIFT ROD ADJUSTMENT	7-37
WATER PUMP REMOVAL & INSTALLATION	7-24
LOWER UNIT TYPE "D" (TWO-PIECE - CAM OR COUPLER SHIFT, F-N-R)	7-38
ASSEMBLY	7-46
CLEANING & INSPECTION	7-45
DISASSEMBLY	7-40
SEPARATING LOWER UNIT FROM INTERMEDIATE HOUSING	7-38
WATER PUMP REMOVAL & INSTALLATION	7-39

LUBRICATING THE MOTOR ASSEMBLY	2-4	REMOVAL & INSTALLATION	6-9
LUBRICATION	2-4	REGULATIONS FOR YOUR BOAT	1-4
GENERAL INFORMATION	2-4	CAPACITY INFORMATION	1-4
LOWER UNIT	2-6	CERTIFICATE OF COMPLIANCE	1-5
LUBRICATION INSIDE THE BOAT	2-6	DOCUMENTING OF VESSELS	1-4
LUBRICATING THE MOTOR ASSEMBLY	2-4	HULL IDENTIFICATION NUMBER	1-4
2-STROKE OIL	2-8	LENGTH OF BOATS	1-4
LUBRICATION INSIDE THE BOAT	2-6	NUMBERING OF VESSELS	1-4
MAINTENANCE COVERAGE	2-2	REGISTRATION OF BOATS	1-4
MAINTENANCE EQUALS SAFETY	2-2	SALES AND TRANSFERS	1-4
MAINTENANCE OR REPAIR?	1-2	VENTILATION	1-5
MEASURING TOOLS	1-24	VENTILATION SYSTEMS	1-5
DEPTH GAUGES	1-26	REMOTE CONTROL BOX	9-2
DIAL INDICATORS	1-25	ASSEMBLY	9-6
MICROMETERS & CALIPERS	1-24	CLEANING & INSPECTION	9-5
TELESCOPING GAUGES	1-26	DISASSEMBLY & ASSEMBLY	9-2
MECHANICAL TILT PIN - ALL UNITS	8-4	REMOVAL & INSTALLATION	9-2
OAR/PADDLE	1-10	REMOTE CONTROLS	9-2
OTHER COMMON TOOLS	1-22	INTRODUCTION	9-2
OUTBOARDS ON SAIL BOATS	2-2	OPERATION	9-2
OVERHEAT WARNING HORN	4-71	REMOTE CONTROL BOX	9-2
TESTING	4-71	REQUIRED SAFETY EQUIPMENT	1-5
PERSONAL FLOTATION DEVICES	1-7	FIRE EXTINGUISHERS	1-6
CARE OF LIFE JACKETS	1-8	PERSONAL FLOTATION DEVICES	1-7
GENERAL CONSIDERATIONS	1-8	SOUND PRODUCING DEVICES	1-8
LEGAL REQUIREMENTS	1-8	TYPES OF FIRES	1-5
TYPE I PFDS	1-7	VISUAL DISTRESS SIGNALS	1-8
TYPE II PFDS	1-7	WARNING SYSTEM	1-7
TYPE III PFDS	1-17	SAFETY IN SERVICE	1-12
TYPE IV PFDS	1-7	DO'S	1-12
TYPE V PFDS	1-7	DON'TS	1-12
POLARITY CHECK	4-16	GENERAL INFORMATION	1-12
POWER TRIM/TILT SWITCH	4-70	SAFETY TOOLS	1-16
POWERHEAD	6-2	EYE & EAR PROTECTION	1-16
ASSEMBLY & INSTALLATION	6-26	WORK CLOTHES	1-17
BREAK-IN PROCEDURES	6-33	WORK GLOVES	1-16
CLEANING & INSPECTION	6-17	SENDERS & SWITCHES	4-70
DESCRIPTION & OPERATION	6-2	CHOKE SOLENOID	4-71
DISASSEMBLY	6-11	CIRCUIT BREAKER	4-72
EXPLODED VIEWS	6-22	IGNITION SWITCH	4-70
INTRODUCTION	6-2	KILL SWITCH	4-71
INTAKE MANIFOLD & REED BLOCK ASSEMBLY	6-8	OVERHEAT WARNING HORN	4-71
POWERHEAD	6-10	POWER TRIM/TILT SWITCH	4-70
PREPARATION FOR SERVICE WORK	6-5	SHIFT INTERLOCK SWITCH	4-71
REMOVAL	6-10	TEMPERATURE SENDING UNIT	4-70
PREPARATION FOR SERVICE WORK	6-5	TRIM/TILT MOTOR	4-70
PRELIMINARY TASKS	6-5	SERIAL NUMBER IDENTIFICATION	2-2
REMOVAL - MISCELLANEOUS COMPONENTS	6-5	SHIFT INTERLOCK SWITCH	4-71
PROFESSIONAL HELP	1-3	TESTING	4-71
PROPELLER	2-13	SHOP EQUIPMENT	1-16
CAVITATION	2-13	CHEMICALS	1-17
CUPPING	2-14	SAFETY TOOLS	1-16
DIAMETER & PITCH	2-12	SPARK PLUG EVALUATION	4-15
HIGH PERFORMANCE	2-14	SPARK PLUG WIRES	2-26
INSPECTION	2-14	REMOVAL & INSTALLATION	2-27
PROGRESSIVE PITCH	2-14	TESTING	2-26
PROPELLER RAKE	2-13	SPARK PLUGS	2-22
PROPELLER SELECTION	2-12	HEAT RANGE	2-23
ROTATION	2-14	INSPECTION & GAPPING	2-26
SHOCK ABSORBERS	2-13	READING PLUGS	2-25
VIBRATION	2-13	REMOVAL & INSTALLATION	2-23
1 & 2-CYLINDER UNITS	7-6	SPECIAL TOOLS	1-23
3 & 4-CYLINDER UNITS	7-7	SPECIFICATIONS	1-27
PURCHASING PARTS	1-3	CARBURETOR JET SIZE	2-56, 3-40
PURGING AIR FROM SYSTEM - LATE MODELS	8-9	COMPRESSION	6-46
RECTIFIER/REGULATOR	4-55	CONVERSION FACTORS	1-27
REMOVAL & INSTALLATION	4-55	CYLINDER COMPRESSION	2-56
TERMINALS & LEADS	4-55	GENERAL ENGINE	6-35
TESTING	4-56	LOWER UNIT CAPACITIES	7-52
REED BLOCK ASSEMBLY	6-8	MAINTENANCE INTERVALS	2-55
CLEANING & SERVICE	6-9	METRIC BOLTS - TYPICAL TORQUE VALUES	1-28
GENERAL INFORMATION	6-8	POWERHEAD	6-45

10-22 MASTER INDEX

POWERHEAD TORQUE	6-34	FOLLOWER ARM ON STATOR RING CAM	2-32
TUNE-UP SPECIFICATIONS	2-57	IDLE MIXTURE	2-33
U.S. STANDARD BOLTS - TYPICAL TORQUE VALUES	1-28	PLASTIC ROLLER ON THROTTLE CAM	2-32
STARTER MOTOR	4-60	THROTTLE PICK-UP	2-32
ASSEMBLY & INSTALLATION	4-66	TACHOMETERS & CONNECTIONS	4-9
CLEANING & INSPECTION	4-63	TEMPERATURE SENDING UNIT	4-70
CLEANING & INSPECTION	4-63	TEST EQUIPMENT	4-4
DESCRIPTION	4-60	GENERAL INFORMATION	4-4
REMOVAL & DISASSEMBLY	4-60	JUMPER WIRES	4-5
TESTING	4-63	MULTI-METERS	4-6
STARTER MOTOR CIRCUIT	4-58	TEST LIGHTS	4-5
DESCRIPTION & OPERATION	4-58	TESTING BASIC IGNITION COMPONENTS	4-19
FAULTY SYMPTOMS	4-58	TESTING TRIM/TILT SYSTEM - LATE MODELS	8-10
MAINTENANCE	4-58	ELECTRICAL TESTS	8-11
STARTER MOTOR	4-60	HYDRAULIC TESTS	8-10
STARTER MOTOR RELAY	4-59	THERMOSTAT	5-6
THEORY OF OPERATION	4-58	GENERAL INFORMATION	5-6
TROUBLESHOOTING	4-58	REMOVAL & INSTALLATION	5-7
STARTER MOTOR RELAY	4-59	TESTING	5-8
REMOVAL & INSTALLATION	4-59	TIMING & SYNCHRONIZING	2-28
TESTING	4-60	IGNITION TIMING	2-45
TROUBLESHOOTING	4-59	GENERAL INFORMATION	2-28
STATOR SERVICE	4-57	WALBRO LMB ("A")	2-32
REMOVAL & INSTALLATION	4-57	TILLOTSON MT ("B")	2-34
TESTING	4-57	TILLOTSON MD ("C")	2-35
SYNCHRONIZATION - AMAL ("F")	2-45	MODELS BELOW 45 HP W/TILLOTSON CO, TC OR WB ("D")	2-37
SYNCHRONIZATION - GENERAL INFORMATION	2-30	TILLOTSON CO, TC AND WB ("D") OR WALBRO WE ("E"), 35 HP (1980-84) AND LARGER	2-40
ELECTRIC CHOKE	2-31	AMAL ("F")	2-45
IDLE MIXTURE	2-30	TOOLS	1-18
IDLE SPEED	2-31	ELECTRONIC TOOLS	1-23
NEUTRAL WARM-UP	2-31	GENERAL INFORMATION	1-18
THROTTLE PICK-UP	2-30	HAND TOOLS	1-19
SYNCHRONIZATION - MODELS BELOW 45 HP W/TILLOTSON CO, TC OR WB ("D")	2-37	MEASURING TOOLS	1-24
DYNAMIC ADJUSTMENTS	2-39	OTHER COMMON TOOLS	1-22
ELECTRIC CHOKE	2-39	SPECIAL TOOLS	1-23
IDLE SPEED	2-39	TOOLS & SPARE PARTS	1-12
MIXTURE SETTING CHECK	2-39	TRIM CYLINDER, TILT CYLINDER & SHOCK ABSORBER - LATE MODELS	8-17
STATIC ADJUSTMENTS	2-38	REMOVAL & INSTALLATION	8-17
IDLE MIXTURE	2-38	SHOCK ABSORBER SERVICE	8-20
THROTTLE PICK-UP	2-38	TILT CYLINDER DISASSEMBLY & ASSEMBLY	8-18
THROTTLE PICK-UP CHECK	2-38	TRIM CYLINDER DISASSEMBLY	8-18
SYNCHRONIZATION - TILLOTSON CO, TC AND WB ("D") OR WALBRO WE ("E"), 35 HP (1980-84) AND LARGER	2-40	TRIM/TILT COMPONENTS - EARLY MODELS	8-5
DYNAMIC ADJUSTMENTS	2-42	ASSEMBLY - SYSTEM "A"	8-8
IDLE MIXTURE	2-43	CLEANING & INSPECTION - SYSTEM "A"	8-7
IDLE MIXTURE CHECK	2-44	DISASSEMBLY - SYSTEM "A"	8-6
IDLE SPEED	2-44	DISASSEMBLY & ASSEMBLY - SYSTEM "B"	8-8
NEUTRAL WARM UP SPEED	2-45	INSTALLATION TO CLAMP BRACKET	8-6
STATIC ADJUSTMENTS	2-40	REMOVAL	8-5
ELECTRIC CHOKE	2-42	TRIM/TILT MOTOR	4-70
IDLE MIXTURE	2-41	TESTING	4-70
THROTTLE PICK-UP	2-40	TRIM/TILT SENDING UNIT - LATE MODELS	8-20
THROTTLE PICK-UP CHECK	2-40	ADJUSTMENT	8-20
THROTTLE SHUTTER PLATES	2-41	TRIM/TILT SERVICE	
WOT POSITION CHECK	2-40	EARLY MODELS	8-4
SYNCHRONIZATION - TILLOTSON MD ("C")	2-35	LATE MODELS	8-13
DYNAMIC ADJUSTMENTS	2-36	TRIM/TILT SYSTEMS	8-2
IDLE SPEED	2-37	INTRODUCTION	8-2
STATIC ADJUSTMENTS	2-36	MECHANICAL TILT PIN - ALL UNITS	8-4
IDLE MIXTURE	2-36	SYSTEM OPERATION	8-2
THROTTLE PICK-UP	2-36	TROUBLESHOOTING	1-13
SYNCHRONIZATION - TILLOTSON MT ("B")	2-34	BASIC OPERATING PRINCIPLES	1-13
DYNAMIC ADJUSTMENTS	2-34	CARBURETOR	3-5
HIGH SPEED	2-35	CHARGING SYSTEM	4-55
IDLE SPEED	2-35	COOLING SYSTEM	5-2
STATIC ADJUSTMENTS	2-34	ELECTRICAL SYSTEM	4-6
IDLE MIXTURE	2-34	GENERAL INFORMATION	1-13
THROTTLE PICK-UP	2-34	IGNITION COMPONENTS	4-17
SYNCHRONIZATION - WALBRO LMB ("A")	2-32	LOWER UNIT	7-4
DYNAMIC ADJUSTMENTS	2-33	STARTER	4-58
STATIC ADJUSTMENTS	2-32	TRIM/TILT	8-9

TRUBLESHOOTING BASIC IGNITION COMPONENTS	4-17	REPLACING FRAYED OR BROKEN STARTER ROPE	10-11
COMPRESSION	4-18	TYPE I IGNITION SYSTEMS - FLYWHEEL MAGNETO,	
KEY SWITCH	4-17	BATTERY-TYPE & MAGNAPOWER I	4-22
SPARK PLUGS	4-17	BREAKER POINT/CONDENSER SERVICE	4-26
TRADING SPARK PLUGS	4-17	COMPONENT FUNCTIONS	4-22
WIRING HARNESS	4-17	DESCRIPTION & OPERATION	4-23
TRUBLESHOOTING THE CHARGING SYSTEM	4-55	SERVICING	4-26
TRUBLESHOOTING THE ELECTRICAL SYSTEM	4-6	SYSTEM COMPONENTS	4-22
OPEN CIRCUITS	4-8	TESTING	4-24
RESISTANCE	4-7	TYPE II IGNITION SYSTEM - MAGNAPOWER II	4-28
SHORT CIRCUITS	4-8	DESCRIPTION & OPERATION	4-28
VOLTAGE	4-7	SERVICING	4-32
VOLTAGE DROP	4-7	TESTING	4-29
TRUBLESHOOTING THE STARTER	4-58	TYPE III IGNITION SYSTEMS - CD, PRESTOLITE &	
FURTHER TESTS FOR SOLENOID	4-59	MAGNAPOWER III	4-34
LARGE RED CABLE	4-59	DESCRIPTION & OPERATION	4-34
MOTOR FAILS TO CRANK POWERHEAD	4-59	IGNITION STATOR & TRIGGER	4-42
MOTOR ROTATES SLOWLY	4-59	TESTING	4-35
OPEN WIRE	4-59	TYPE IV IGNITION SYSTEM - UNITS WITH DISTRIBUTOR	4-44
SHIFT INTERLOCK SWITCH	4-59	DESCRIPTION & OPERATION	4-44
SOLENOID	4-59	DISTRIBUTOR	4-48
TUNE-UP	2-20	TESTING	4-46
BREAKER POINTS	2-27	UNDERSTANDING & TROUBLESHOOTING ELECTRICAL SYSTEMS	4-2
COMPRESSION TESTING	2-21	BASIC ELECTRICAL THEORY	4-2
ELECTRICAL SYSTEM CHECKS	2-27	BATTERY	4-9
FUEL SYSTEM CHECKS	2-28	ELECTRICAL COMPONENTS	4-2
INTRODUCTION	2-20	TACHOMETERS & CONNECTIONS	4-9
SPARK PLUG WIRES	2-26	TEST EQUIPMENT	4-4
SPARK PLUGS	2-22	TROUBLESHOOTING THE ELECTRICAL SYSTEM	4-6
TUNE-UP SEQUENCE	2-20	WIRE & CONNECTOR REPAIR	4-8
TUNE-UP SEQUENCE	2-20	VHF-FM RADIO	1-10
TYPE "A" HAND REWIND STARTER	10-2	WATER PUMP	5-3
ASSEMBLY & INSTALLATION	10-4	REMOVAL & INSTALLATION	5-3
CLEANING & INSPECTION	10-3	SERVICE CAUTIONS	5-3
REMOVAL & DISASSEMBLY	10-2	WHERE TO BEGIN	1-2
TYPE "B" HAND REWIND STARTER	10-7	WINTER STORAGE	2-52
ASSEMBLY & INSTALLATION	10-9	WIRE & CONNECTOR REPAIR	4-8
CLEANING & INSPECTION	10-8	WIRING DIAGRAMS	4-72
REMOVAL & DISASSEMBLY	10-7	INDEX	4-72
SHIFT INTERLOCK SYSTEM	10-7	1- & 2-CYL POWERHEADS	4-72
TYPE "C" HAND REWIND STARTER - MOUNTED VERTICALLY	10-11	3- & 4-CYL POWERHEADS	4-82
CLEANING & INSPECTION	10-13	WIRING HARNESS	4-17
INSTALLATION	10-14		
INTERLOCK SYSTEM ADJUSTMENT	10-18		
REPLACING A BROKEN SPRING	10-15		