



Presents

# Repair Manuals from **SELOC**

## Contents of this manual:

---

<b>1</b> GENERAL INFORMATION, SAFETY AND TOOLS	HOW TO USE THIS MANUAL	1-2
	BOATING SAFETY	1-4
	BOATING EQUIPMENT (NOT REQUIRED BUT RECOMMENDED)	1-10
	SAFETY IN SERVICE	1-13
	TROUBLESHOOTING	1-13
	SHOP EQUIPMENT	1-17
	TOOLS	1-19
	FASTENERS, MEASUREMENT, AND CONVERSIONS	1-26
	SPECIFICATIONS	1-28
<b>2</b> MAINTENANCE & TUNE-UP	GENERAL INFORMATION	2-2
	LUBRICATION SERVICE	2-5
	ENGINE MAINTENANCE	2-9
	BOAT MAINTENANCE	2-26
	TUNE-UP	2-30
	TIMING AND SYNCHRONIZATION	2-37
	STORAGE (WHAT TO DO BEFORE AND AFTER)	2-43
	CLEARING A SUBMERGED MOTOR	2-47
	SPECIFICATIONS	2-48
<b>3</b> FUEL & IGNITION SYSTEMS	FUEL SYSTEM BASICS	3-2
	FUEL TANK AND LINES	3-6
	FICHT FUEL INJECTION (DI/FFI) & IGNITION SYSTEM	3-11
	E-TEC FUEL INJECTION & IGNITION SYSTEM	3-54
	SPECIFICATIONS	3-92
<b>4</b> ELECTRICAL SYSTEMS	UNDERSTANDING AND TROUBLESHOOTING	
	ELECTRICAL SYSTEMS	4-2
	CHARGING CIRCUIT	4-8
	STARTING CIRCUIT	4-18
	WARNING SYSTEM	4-35
	WIRING DIAGRAMS	4-38
	SPECIFICATIONS	4-60
<b>5</b> LUBRICATION & COOLING	OIL INJECTION SYSTEM- DI/FICHT MOTORS	5-2
	OIL INJECTION SYSTEM - E-TEC MOTORS	5-10
	COOLING SYSTEM	5-18
	SPECIFICATIONS	5-38

---

# CONTENTS

POWERHEAD 6-2  
POWERHEAD BREAK-IN 6-29  
POWERHEAD EXPLODED VIEWS 6-30  
SPECIFICATIONS 6-38

POWERHEAD

6

GEARCASE 7-2

LOWER UNIT

7

TRIM/TILT SYSTEMS 8-2

TRIM & TILT

8

REMOTE CONTROLS 9-2  
CONTROL CABLES 9-16

REMOTE CONTROLS

9

HAND REWIND STARTER 10-2

HAND REWIND STARTER

10

MASTER INDEX 10-7

MASTER INDEX

WHERE TO BEGIN .....	1-2	PRE-WIRED BINNACLE MOUNT REMOTE .....	9-12
IGNITION COILS		OVERHAUL .....	9-12
E-TEC .....	3-87	PRESSURE RELIEF VALVE .....	5-24
FICHT .....	3-46	REMOVAL & INSTALLATION .....	5-24
IGNITION TIMING		PRESSURE (EP AND BP) SENSOR	
CHECKING .....	2-43	E-TEC .....	3-90
IMPELLER .....	5-25	FICHT .....	3-49
GENERAL INFORMATION .....	5-25	PROPELLER .....	2-22
INSPECTION & OVERHAUL .....	5-29	GENERAL INFORMATION .....	2-22
REMOVAL & INSTALLATION .....	5-25	INSPECTION .....	2-22
INTAKE MANIFOLD AND LEAF VALVE .....	6-27	REMOVAL & INSTALLATION .....	2-23
REMOVAL, INSPECTION & INSTALLATION .....	6-27	PROPELLER SHAFT SEAL .....	7-38
LINKAGE, CABLES AND SHAFTS .....	2-7	GENERAL INFORMATION .....	7-38
LUBRICATION .....	2-7	REPLACEMENT .....	7-38
RECOMMENDED LUBRICANT .....	2-7	RE-COMMISSIONING .....	2-46
LOW PRESSURE FUEL PUMP (LIFT PUMP)		<b>REMOTE CONTROLS .....</b>	<b>9-2</b>
E-TEC .....	3-76	CONCEALED SIDE MOUNT REMOTE UNITS .....	9-9
FICHT .....	3-34	DESCRIPTION AND OPERATION .....	9-2
LOWER UNIT (GEARCASE) OIL .....	2-17	DUAL HANDLE SURFACE MOUNT REMOTE UNITS FOR SINGLE	
CHECKING OIL LEVEL & CONDITION .....	2-17	MOTORS .....	9-8
DRAINING AND FILLING .....	2-18	INTRODUCTION .....	9-2
GENERAL INFORMATION .....	2-17	PRE-WIRED BINNACLE MOUNT REMOTE UNITS .....	9-12
OIL RECOMMENDATIONS .....	2-17	SMALL MOTOR STANDARD SURFACE REMOTE UNITS .....	9-6
<b>LUBRICATION SERVICE .....</b>	<b>2-5</b>	STANDARD SURFACE MOUNT REMOTE UNITS .....	9-3
ELECTRIC STARTER MOTOR PINION .....	2-5	<b>SAFETY IN SERVICE .....</b>	<b>1-13</b>
ENGINE COVER LATCHES .....	2-6	DO'S .....	1-13
GENERAL INFORMATION .....	2-5	DON'TS .....	1-13
LINKAGE, CABLES AND SHAFTS .....	2-7	SELF-DIAGNOSTIC SYSTEM - E-TEC .....	3-59
POWER TRIM/TILT RESERVOIR .....	2-6	LED DIAGNOSTICS .....	3-59
STEERING ARM .....	2-8	TROUBLE CODES .....	3-60
SWIVEL BRACKET AND TILT SUPPORT .....	2-8	SELF-DIAGNOSTIC SYSTEM - FICHT .....	3-17
TILT TUBE ASSEMBLY .....	2-9	TROUBLE CODES .....	3-17
MANUAL STARTER ASSEMBLY .....	10-2	READING CODES .....	3-17
DISASSEMBLY & ASSEMBLY .....	10-4	MANUALLY CLEARING CODES .....	3-19
GENERAL INFORMATION .....	10-2	SHIFT INTERRUPT SWITCH	
MANUAL STARTER SERVICE .....	10-2	E-TEC .....	3-89
REMOVAL & INSTALLATION .....	10-2	FICHT .....	3-49
OIL COMPONENT ASSEMBLY		<b>SHOP EQUIPMENT .....</b>	<b>1-17</b>
E-TEC .....	5-15	CHEMICALS .....	1-17
FICHT .....	5-7	SAFETY TOOLS .....	1-17
OIL FILTER .....	2-26	SMALL MOTOR STANDARD SURFACE REMOTE .....	9-6
GENERAL INFORMATION .....	2-26	OVERHAUL .....	9-6
INSPECTOR & SERVICE .....	2-26	SPARK PLUG WIRES .....	2-36
<b>OIL INJECTION SYSTEM - DI/FICHT .....</b>	<b>5-2</b>	REMOVAL & INSTALLATION .....	2-37
DESCRIPTION AND OPERATION .....	5-2	TESTING .....	2-36
GENERAL INFORMATION .....	5-2	SPARK PLUGS .....	2-32
OIL COMPONENT ASSEMBLY .....	5-7	GENERAL INFORMATION .....	2-32
OIL RECIRCULATION SYSTEM DIAGRAMS .....	5-9	INSPECTION & GAPPING .....	2-36
TROUBLESHOOTING .....	5-3	HEAT RANGE .....	2-32
<b>OIL INJECTION SYSTEM - E-TEC .....</b>	<b>5-10</b>	READING SPARK PLUGS .....	2-34
DESCRIPTION AND OPERATION .....	5-10	REMOVAL & INSTALLATION .....	2-32
GENERAL INFORMATION .....	5-10	<b>SPECIFICATIONS</b>	
OIL COMPONENT ASSEMBLY .....	5-15	CAPACITIES .....	2-52
OIL RECIRCULATION SYSTEM DIAGRAMS .....	5-17	CONVERSION FACTORS .....	1-28
TROUBLESHOOTING .....	5-11	COOLING SYSTEM .....	5-38
OIL RECIRCULATION SYSTEM DIAGRAMS		ENGINE - 40-90 HP 2/3-CYL E-TEC .....	6-38
E-TEC .....	5-17	ENGINE - 75-115 HP DI/FICHT V4 .....	6-39
FICHT .....	5-9	ENGINE - 135-175 HP DI/FICHT V6 .....	6-39
POWER TRIM/TILT RESERVOIR .....	2-6	ENGINE - 200-250 HP DI/FICHT & E-TEC V6 .....	6-40
CHECKING FLUID LEVEL/CONDITION .....	2-7	GENERAL ENGINE .....	2-49
RECOMMENDED LUBRICANT .....	2-6	GENERAL ENGINE SYSTEM .....	2-49
POWERHEAD .....	6-5	IGNITION & INJECTOR SENSOR TESTING .....	3-92
ASSEMBLY .....	6-14	LUBRICATION SERVICES .....	2-51
CLEANING & INSPECTION .....	6-20	MAINTENANCE INTERVALS .....	
DISASSEMBLY .....	6-10	METRIC BOLTS - TYPICAL TORQUE VALUES .....	1-30
REMOVAL & INSTALLATION .....	6-5	SPARK PLUG DIAGNOSIS .....	2-54
<b>POWERHEAD .....</b>	<b>6-2</b>	STATOR TESTING .....	4-60
FLYWHEEL .....	6-3	TUNE-UP .....	2-53
FLYWHEEL COVER .....	6-2	TWO-STROKE MOTOR FUEL:OIL RATIO .....	2-48
GENERAL INFORMATION .....	6-2	U.S. STANDARD BOLTS - TYPICAL TORQUE VALUES .....	1-29
INTAKE MANIFOLD & LEAF VALVE .....	6-27	STANDARD SURFACE MOUNT REMOTE .....	9-3
POWERHEAD .....	6-5	OVERHAUL .....	9-3
<b>POWERHEAD BREAK-IN .....</b>	<b>6-29</b>	START CIRCUIT SWITCHES .....	4-22
GENERAL INFORMATION .....	6-29	STARTER MOTOR .....	4-24
<b>POWERHEAD EXPLODED VIEWS .....</b>	<b>6-30</b>	CLEANING & INSPECTION .....	4-32

# 10-10 MASTER INDEX

GENERAL INFORMATION . . . . .	4-24	REMOVAL & INSTALLATION . . . . .	8-13
REMOVAL & INSTALLATION . . . . .	4-26	<b>TRIM/TILT SYSTEMS . . . . .</b>	<b>8-2</b>
OVERHAUL . . . . .	4-27	DESCRIPTION & OPERATION . . . . .	8-3
STARTER MOTOR SOLENOID/RELAY SWITCH . . . . .	4-34	INTRODUCTION . . . . .	8-2
GENERAL INFORMATION . . . . .	4-34	SYSTEM IDENTIFICATION . . . . .	8-2
REMOVAL & INSTALLATION . . . . .	4-35	TILT LIMIT SWITCH . . . . .	8-10
TESTING THE SOLENOID . . . . .	4-34	TRIM SENDING UNIT . . . . .	8-11
<b>STARTING CIRCUIT . . . . .</b>	<b>4-18</b>	TRIM/TILT ASSEMBLY -1-RAM . . . . .	8-12
DI/FICHT STARTER CIRCUIT . . . . .	4-19	TRIM/TILT ASSEMBLY -3-RAM . . . . .	8-13
E-TEC STARTER CIRCUIT . . . . .	4-21	TROUBLESHOOTING . . . . .	8-5
ELECTRIC STARTER BASICS . . . . .	4-18	<b>TROUBLESHOOTING</b>	
START CIRCUIT SWITCHES . . . . .	4-22	2-STROKE MOTORS . . . . .	1-14
STARTER MOTOR . . . . .	4-24	4-STROKE MOTORS . . . . .	1-16
STARTER MOTOR SOLENOID/RELAY SWITCH . . . . .	4-34	BASIC OPERATING PRINCIPLES . . . . .	1-13
STATOR/BATTERY CHARGE COIL . . . . .	4-12	CHARGING SYSTEM . . . . .	4-9
GENERAL INFORMATION . . . . .	4-12	COMBUSTION . . . . .	1-16
REMOVING & INSTALLATION . . . . .	4-15	COOLING SYSTEM . . . . .	5-19
STEERING ARM . . . . .	2-8	E-TEC FUEL SYSTEM . . . . .	3-57
LUBRICATION . . . . .	2-8	E-TEC OIL SYSTEM . . . . .	5-11
RECOMMENDED LUBRICANT . . . . .	2-8	ELECTRICAL SYSTEMS . . . . .	4-6
<b>STORAGE (WHAT TO DO BEFORE AND AFTER) . . . . .</b>	<b>2-43</b>	FICHT FUEL SYSTEM . . . . .	3-14
RE-COMMISSIONING . . . . .	2-46	FICHT OIL SYSTEM . . . . .	5-3
WINTERIZATION . . . . .	2-43	GEARCASE . . . . .	7-3
SWIVEL BRACKET AND TILT SUPPORT . . . . .	2-8	TRIM/TILT . . . . .	8-5
LUBRICATION . . . . .	2-8	WARNING SYSTEM . . . . .	4-36
RECOMMENDED LUBRICANT . . . . .	2-8	<b>TUNE-UP . . . . .</b>	<b>2-30</b>
TEMPERATURE SENSORS/SWITCHES		COMPRESSION CHECK . . . . .	2-31
E-TEC . . . . .	3-84	IGNITION SYSTEM MAINTENANCE . . . . .	2-37
FICHT . . . . .	3-43	INTRODUCTION . . . . .	2-30
THERMOSTAT . . . . .	5-22	SPARK PLUG WIRES . . . . .	2-36
GENERAL INFORMATION . . . . .	5-22	SPARK PLUGS . . . . .	2-32
REMOVAL & INSTALLATION . . . . .	5-22	TUNE-UP SEQUENCE . . . . .	2-30
THROTTLE BODY		TUNE-UP SEQUENCE . . . . .	2-30
E-TEC . . . . .	3-75	<b>UNDERSTANDING AND TROUBLESHOOTING ELECTRICAL SYSTEMS . 4-2</b>	
FICHT . . . . .	3-33	BASIC ELECTRICAL THEORY . . . . .	4-2
THROTTLE PLATE SYNCHRONIZATION		ELECTRICAL COMPONENTS . . . . .	4-2
(DI/FICHT ONLY) . . . . .	2-38	ELECTRICAL SYSTEM PRECAUTIONS . . . . .	4-8
THROTTLE POSITION (TP) SENSOR		ELECTRICAL TESTING . . . . .	4-6
E-TEC . . . . .	3-86	TEST EQUIPMENT . . . . .	4-4
FICHT . . . . .	3-45	TROUBLESHOOTING ELECTRICAL SYSTEMS . . . . .	4-6
TILT LIMIT SWITCH . . . . .	8-10	WIRE AND CONNECTOR REPAIR . . . . .	4-8
ADJUSTMENT . . . . .	8-10	VST ASSEMBLY	
GENERAL INFORMATION . . . . .	8-10	E-TEC . . . . .	3-79
TILT TUBE ASSEMBLY . . . . .	2-9	FICHT . . . . .	3-37
LUBRICATION . . . . .	2-9	<b>WARNING SYSTEM . . . . .</b>	<b>4-35</b>
RECOMMENDED LUBRICANT . . . . .	2-9	DESCRIPTION AND OPERATION . . . . .	4-35
<b>TIMING AND SYNCHRONIZATION . . . . .</b>	<b>2-37</b>	ENGINE TEMPERATURE SENSORS/SWITCHES . . . . .	4-37
DI (FICHT) AND E-TEC MOTORS . . . . .	2-38	TROUBLESHOOTING . . . . .	4-36
GENERAL INFORMATION . . . . .	2-37	WATER PRESSURE CONNECTION	
TIMING POINTER . . . . .	2-42	INLINE E-TEC MODELS . . . . .	5-25
TOOLS . . . . .	1-19	WATER PUMP AND IMPELLER . . . . .	5-25
ELECTRONIC TOOLS . . . . .	1-24	GENERAL INFORMATION . . . . .	5-25
HAND TOOLS . . . . .	1-19	INSPECTION & OVERHAUL . . . . .	5-29
MEASURING TOOLS . . . . .	1-25	REMOVAL & INSTALLATION . . . . .	5-25
OTHER COMMON TOOLS . . . . .	1-23	WINTERIZATION . . . . .	2-43
SPECIAL TOOLS . . . . .	1-23	GENERAL INFORMATION . . . . .	2-43
TRIM SENDING UNIT . . . . .	8-11	PREPPING FOR STORAGE . . . . .	2-44
ADJUSTMENT . . . . .	8-11	STORAGE CHECKLIST . . . . .	2-44
TRIM/TILT ASSEMBLY -1-RAM SYSTEMS . . . . .	8-12	WHERE TO STORE YOUR BOAT AND MOTOR . . . . .	2-44
REMOVAL & INSTALLATION . . . . .	8-12	WIRING & HARNESSSES . . . . .	4-4
TRIM/TILT ASSEMBLY -3-RAM SYSTEMS . . . . .	8-13	TEST EQUIPMENT . . . . .	4-4
ASSEMBLY . . . . .	8-18	<b>WIRING DIAGRAMS . . . . .</b>	<b>4-38</b>
CLEANING AND INSPECTION . . . . .	8-18	INDEX . . . . .	4-38
DISASSEMBLY . . . . .	8-15	ZINCS . . . . .	2-24
		GENERAL INFORMATION . . . . .	2-24
		INSPECTION . . . . .	2-24
		SERVICE . . . . .	2-25