



Presents

Repair Manuals from **SELOC.**

Contents of this manual:

1 GENERAL INFORMATION, SAFETY AND TOOLS	HOW TO USE THIS MANUAL	1-2
	BOATING SAFETY	1-4
	BOATING EQUIPMENT (NOT REQUIRED BUT RECOMMENDED)	1-10
	SAFETY IN SERVICE	1-12
	TROUBLESHOOTING	1-13
	SHOP EQUIPMENT	1-16
	TOOLS	1-18
	FASTENERS, MEASUREMENT, AND CONVERSIONS	1-26
	SPECIFICATIONS	1-27

2 MAINTENANCE & TUNE-UP	GENERAL INFORMATION	2-2
	LUBRICATION SERVICE	2-5
	ENGINE MAINTENANCE	2-12
	BOAT MAINTENANCE	2-26
	TUNE-UP	2-39
	TIMING AND SYNCHRONIZATION	2-48
	VALVE CLEARANCE (4-STROKE MODELS)	2-76
	STORAGE	2-86
	CLEARING A SUBMERGED MOTOR	2-90
	SPECIFICATIONS	2-91

3 FUEL SYSTEMS	FUEL SYSTEM BASICS	3-2
	FUEL TANK AND LINES	3-6
	CARBURETED FUEL SYSTEM	3-12
	SPECIFICATIONS	3-47
	ELECTRONIC FUEL INJECTION (EFI)	3-48

4 IGNITION & ELECTRICAL SYSTEMS	UNDERSTANDING AND TROUBLESHOOTING	
	ELECTRICAL SYSTEMS	4-2
	IGNITION SYSTEMS	4-8
	CHARGING CIRCUIT	4-52
	STARTING CIRCUIT	4-71
	WARNING SYSTEM	4-107
	WIRING DIAGRAMS	4-114
	SPECIFICATIONS	4-144

5 LUBRICATION & COOLING	OIL METERING SYSTEM (OMS) - 2-STROKE MOTORS	5-2
	LUBRICATION SYSTEM - 4-STROKE MOTORS	5-12
	COOLING SYSTEM	5-28
	SPECIFICATIONS	5-62

CONTENTS

POWERHEAD
POWERHEAD BREAK-IN
SPECIFICATIONS

6-2
6-129
6-130

POWERHEAD

6

GEARCASE
SPECIFICATIONS CHARTS

7-2
7-96

LOWER UNIT

7

TRIM/TILT SYSTEMS- 2-STROKE
TRIM/TILT SYSTEMS- 4-STROKE
MECHANICAL HYDRAULIC TILT ASSIST

8-2
8-15
8-33

TRIM & TILT

8

REMOTE CONTROLS
CONTROL CABLES

9-2
9-14

REMOTE CONTROLS

9

HAND REWIND STARTERS
EMERGENCY STARTING

10-2
10-16

HAND REWIND STARTER

10

MASTER INDEX

10-17

MASTER INDEX

AC LIGHTING COIL	4-69	STATOR/BATTERY CHARGE COIL	4-57
REMOVAL & INSTALLATION	4-69	TROUBLESHOOTING	4-54
TESTING	4-69	CHARGING SYSTEM IDENTIFICATION	4-53
AIR INTAKE SILENCER	3-76	CHEMICALS	1-17
REMOVAL & INSTALLATION	3-76	CLEANERS	1-18
ANODES (ZINCS)	2-34	LUBRICANTS & PENETRANTS	1-17
INSPECTION	2-34	SEALANTS	1-17
LOCATION	2-34	CLEARING A SUBMERGED MOTOR	2-90
SERVICING	2-35	COMPASS	1-10
BASIC ELECTRICAL THEORY	4-2	COMPASS PRECAUTIONS	1-11
HOW DOES IT WORK	4-2	INSTALLATION	1-11
OHM'S LAW	4-2	SELECTION	1-10
BASIC OPERATING PRINCIPLES	1-13	COMPRESSION TESTS	2-41
2-STROKE MOTORS	1-13	OVERHAUL LEAKAGE CHECK	2-42
4-STROKE MOTORS	1-14	TUNE-UP COMPRESSION CHECK	2-41
COMBUSTION	1-16	CONCEALED SIDE MOUNT REMOTE UNITS	9-9
BATTERY		OVERHAUL	9-9
CONSTRUCTION	4-70	REPLACING THE TRIM/TILT SWITCH	9-9
LOCATION	4-70	CONTROL CABLES	9-14
MAINTENANCE	2-36	RIGGING	9-14
MARINE	4-70	COOLING SYSTEM	
RATINGS	4-70	COOLING SYSTEM SCHEMATICS	5-51
SERVICE	4-70	DESCRIPTION & OPERATION	5-28
STORAGE	2-38	FLUSHING	2-15
TESTING	2-38	THERMOSTAT	5-47
BOAT MAINTENANCE	2-36	TROUBLESHOOTING	5-29
BATTERIES	2-36	WATER PRESSURE RELIEF VALVE	5-50
FIBERGLASS HULL	2-39	WATER PUMP	5-32
BOATING EQUIPMENT	1-10	COOLING SYSTEM SCHEMATICS	5-51
ANCHORS	1-10	CRANKSHAFT POSITION SENSOR	3-96
BAILING DEVICES	1-10	REMOVAL & INSTALLATION	3-97
COMPASS	1-10	TESTING	3-96
FIRST AID KIT	1-10	CTP SWITCH	3-101
OAR/PADDLE	1-10	REMOVAL & INSTALLATION	3-102
TOOLS AND SPARE PARTS	1-12	TESTING	3-101
VHF-FM RADIO	1-10	DUAL HANDLE SURFACE MOUNT REMOTE UNITS FOR SINGLE	
BOATING SAFETY	1-4	MOTORS	9-7
COURTESY MARINE EXAMINATIONS	1-10	OVERHAUL	9-7
REGULATIONS FOR YOUR BOAT	1-4	ECM PINOUTS	3-56
REQUIRED SAFETY EQUIPMENT	1-5	EFI SYSTEM RELAY	3-103
BREAKING IN A POWERHEAD	6-129	TESTING & SERVICE	3-103
2-STROKE MOTORS	6-129	ELECTRIC FUEL PRIMER	3-44
4-STROKE MOTORS	6-129	REMOVAL & INSTALLATION	3-46
CAMSHAFT POSITION SENSOR	3-94	TESTING	3-45
REMOVAL & INSTALLATION	3-95	ELECTRIC STARTER MOTOR PINION	2-5
TESTING	3-94	LUBRICATION	2-5
CARBURETED FUEL SYSTEM	3-12	RECOMMENDED LUBRICANT	2-5
CARBURETOR	3-14	ELECTRICAL TESTING	4-6
DESCRIPTION & OPERATION	3-12	OPEN CIRCUITS	4-7
ELECTRIC FUEL PRIMER	3-44	RESISTANCE	4-6
FUEL PUMP	3-39	SHORT CIRCUITS	4-7
MANUAL FUEL PRIMER	3-42	VOLTAGE	4-6
TROUBLESHOOTING	3-13	VOLTAGE DROP	4-6
CARBURETOR	3-14	ELECTRONIC FUEL INJECTION (EFI)	3-48
3.5 HP	3-15	AIR INTAKE SILENCER & FLAME ARRESTER	3-76
6 HP (128cc) 4-STROKE	3-18	CAMSHAFT POSITION SENSOR	3-94
4/5/6 HP (138cc) 4-STROKE	3-20	CRANKSHAFT POSITION SENSOR	3-96
8 HP 4-STROKE	3-21	CTP SWITCH	3-101
9.9/15 HP & 25 HP V2 4-STROKE	3-23	DESCRIPTION & OPERATION	3-48
25/30 HP	2-CYL	ECM PINOUTS	3-56
3-25		EFI SYSTEM RELAY	3-103
6/8/9.9/15 HP & 40/50/55 HP 2-STROKE	3-27	ENGINE CONTROL MODULE	3-97
25/30 HP (3-CYL) 4-STROKE	3-30	ENGINE DIAGNOSTIC CHARTS	3-69
90/105/115 HP V4 & 150/175 HP V6	3-33	EVAPORATION PURGE VALVE	3-103
CLEANING & INSPECTION	3-37	FUEL PRESSURE REGULATOR	3-102
CHARGE COIL	4-18	FUEL RAIL & INJECTORS	3-91
REMOVAL & INSTALLATION	4-22	IAC VALVE	3-104
TESTING	4-18	LOW PRES. ELECT. FUEL PUMP	3-86
CHARGING CIRCUIT	4-52	LOW PRES. MECH. FUEL PUMP	3-83
AC LIGHTING COIL	4-69	MAP SENSOR	3-100
BATTERY	4-69	MULTI-STAGE INDUCTION COMPONENTS	3-102
GENERAL INFORMATION	4-52	NEUTRAL (SAFETY) SWITCH	3-105
IDENTIFICATION	4-53	SELF DIAGNOSTIC SYSTEM	3-51
RECTIFIER	4-59	SENSOR & CIRCUIT TESTS	3-55
REGULATOR/RECTIFIER	4-62	SHIFT POSITION SENSOR	3-107

10-18 INDEX

TEMPERATURE SENSORS	3-98	FUEL LINES/FITTINGS	3-9
THROTTLE BODY & INTAKE MANIFOLD	3-77	SERVICE	3-10
TP SENSOR	3-102	TESTING	3-9
TROUBLESHOOTING	3-48	FUEL PRESSURE REGULATOR	3-102
VAPOR SEPARATOR TANK & HIGH PRES. FUEL PUMP	3-86	FUEL PRIMER	
ELECTRONIC IGNITION SYSTEMS	2-48	ELECTRIC	3-44
INSPECTION	2-48	MANUAL	3-42
ELECTRONIC TOOLS	1-23	FUEL PUMP	
BATTERY CHARGERS	1-23	CARBURETOR	3-39
BATTERY TESTERS	1-23	EFI (LOW)	3-83
GAUGES	1-24	EFI (HIGH)	3-86
MULTI-METERS (DVOMS)	1-23	OVERHAUL	3-41
EMERGENCY STARTING	10-16	REMOVAL & INSTALLATION	3-40
GENERAL INFORMATION	10-16	TESTING	3-39
ENGINE CONTROL MODULE	3-97	FUEL RAIL & INJECTORS	3-91
REMOVAL & INSTALLATION	3-97	REMOVAL & INSTALLATION	3-93
ENGINE COVER LATCHES	2-6	TESTING	3-92
LUBRICATION	2-6	FUEL SYSTEM BASICS	3-2
RECOMMENDED LUBRICANT	2-6	FUEL	3-2
ENGINE COVERS	2-12	FUEL SYSTEM PRESSURIZATION	3-4
REMOVAL & INSTALLATION	2-12	FUEL SYSTEM SERVICE CAUTIONS	3-2
ENGINE DIAGNOSTIC CHARTS	3-69	FUEL SYSTEM PRESSURIZATION	3-4
INLINE POWERHEADS	3-69	CHECKING FOR LEAKS	3-5
V6 POWERHEADS	3-72	RELIEVING PRESSURE	3-4
ENGINE IDENTIFICATION	2-2	FUEL SYSTEM SERVICE CAUTIONS	3-2
MODEL CODE	2-3	FUEL TANK	3-6
SERIAL NUMBERS	2-4	FUEL TANK AND LINES	3-6
ENGINE MAINTENANCE	2-12	FUEL LINES/FITTINGS	3-9
ANODES (ZINCS)	2-34	FUEL TANK	3-6
COOLING SYSTEM	2-15	GAS-CHARGED TILT ASSIST CYLINDER	8-33
ENGINE COVERS	2-12	REMOVAL & INSTALLATION	8-33
ENGINE OIL (2-STROKE)	2-17	GEARCASE OIL	2-24
ENGINE OIL AND FILTER (4-STROKE)	2-19	DRAINING & FILLING	2-25
FUEL & BREATHER LINES	2-30	LEVEL & CONDITION	2-24
FUEL FILTER	2-26	OIL RECOMMENDATIONS	2-24
GEARCASE OIL	2-24	GEARCASE SERVICE	7-2
PROPELLER	2-30	DESCRIPTION & OPERATION	7-2
TIMING BELT	2-36	3.5 HP 2-STROKE	7-6
ENGINE MOUNT CLAMP SCREWS	2-6	4/5/6 HP (138cc) 4-STROKE	7-9
LUBRICATION	2-6	6 HP (128cc) 4-STROKE	7-13
RECOMMENDED LUBRICANT	2-6	6/8 HP (164cc) 2-STROKE	7-13
ENGINE OIL (2-STROKE)	2-17	8 HP 4-STROKE	7-18
FILLING	2-18	9.9/15 HP 4-STROKE	7-22
FUEL:OIL RATIO	2-18	9.9/15 HP 2-STROKE	7-18
OIL RECOMMENDATIONS	2-17	25/30 HP 2-STROKE	7-26
PRE-MIX	2-18	25 HP V2 4-STROKE	7-32
ENGINE OIL/FILTER (4-STROKE)	2-19	25/30 HP 4-STROKE	7-48
OIL CHANGE & FILTER	2-21	40/50 HP (3-CYL) 4-STROKE	7-48
OIL LEVEL	2-19	40/50 HP (737cc) NON-COMMERCIAL 2-STROKE	7-35
OIL RECOMMENDATIONS	2-19	55 HP (737cc) COMMERCIAL	7-42
ENGINE TEMPERATURE SENSORS	4-111	60/70 HP 4-STROKE	7-58
ENGINE TEMPERATURE SWITCHES	4-111	90/115/140 HP 4-STROKE	7-65
REMOVAL & INSTALLATION	4-112	90/105/115 HP V4 2-STROKE	7-74
TESTING	4-111	150/175 HP V6 2-STROKE	7-74
EVAPORATION PURGE VALVE	3-103	200/225/250 HP 4-STROKE	7-87
CHECKING	3-103	HAND REWIND STARTERS	10-2
FASTENERS, MEASUREMENTS AND CONVERSIONS	1-26	GENERAL INFORMATION	10-2
BOLTS, NUTS & OTHER THREADED RETAINERS	1-26	INTRODUCTION	10-2
STANDARD & METRIC MEASUREMENTS	1-27	3.5 HP MOTORS	10-2
TORQUE	1-27	4/5/6 HP (138CC) 4-STROKE MOTORS	10-5
FIBERGLASS HULL	2-39	6 HP (128CC)/8 HP 4-STROKE & 6/8/9.9/15 HP	
INSPECTION AND CARE	2-39	2-STROKE MOTORS	10-6
FLAME ARRESTER	3-76	9.9/15 HP AND 25 HP V2 4-STROKE MOTORS	10-8
REMOVAL & INSTALLATION	3-76	25/30 HP 2-STROKE MOTORS	10-10
FLYWHEEL	6-2	40/50/55 HP 2-CYLINDER MOTORS	10-13
REMOVAL & INSTALLATION	6-2	3-6 CYLINDER MODELS	10-16
FUEL	3-2	HAND TOOLS	1-19
FUEL FILTER	2-26	BREAKER BARS	1-20
CARBURETED MOTORS	2-26	HAMMERS	1-22
FUEL INJECTED MOTORS	2-28	PLIERS	1-21
FUEL/WATER SEPARATING FILTERS	2-30	SCREWDRIVERS	1-21

SOCKET SETS	1-19	DESCRIPTION & OPERATION	5-2
WRENCHES	1-21	OMS PICK-UP AND OIL SUPPLY HOSE	5-5
HOW TO USE THIS MANUAL	1-2	OMS PUMP ASSEMBLY	5-6
AVOIDING COMMON MISTAKES	1-3	OIL RECIRCULATION & VENT HOSES	5-10
AVOIDING TROUBLE	1-2	OMS VERIFICATION & TROUBLESHOOTING	5-2
CAN YOU DO IT?	1-2	PULSE LIMITER	5-6
DIRECTIONS & LOCATIONS	1-2	OIL PRESSURE - 4-STROKE	5-19
MAINTENANCE OR REPAIR?	1-2	TESTING	5-19
PROFESSIONAL HELP	1-3	OIL PRESSURE SWITCH	4-112
PURCHASING PARTS	1-3	REMOVAL & INSTALLATION	4-113
WHERE TO BEGIN	1-2	TESTING	4-113
IAC VALVE	3-104	OIL PRESSURE SWITCH & WARNING SYSTEM	5-27
REMOVAL & INSTALLATION	3-105	OIL PUMP - 4-STROKE	5-20
TESTING	3-104	REMOVAL, OVERHAUL & INSTALLATION	5-20
IGNITION COILS	4-43	OIL RECIRCULATION & VENT HOSES	5-10
DESCRIPTION & OPERATION	4-43	OMS PICK-UP & OIL SUPPLY HOSE	5-5
REMOVAL & INSTALLATION	4-47	INSPECTION & SERVICE	5-5
TESTING	4-44	OMS PUMP ASSEMBLY	5-6
IGNITION SYSTEMS	4-8	OVERHAUL	5-7
CHARGE COIL	4-18	REMOVAL & INSTALLATION	5-6
DESCRIPTION & OPERATION	4-8	POWER COIL	4-31
IGNITION COILS	4-43	REMOVAL & INSTALLATION	4-33
POWER COIL	4-31	TESTING	4-32
POWER PACK (IGNITION MODULE)	4-38	POWER PACK (IGN. MODULE)	4-38
QUIKSTART SYSTEM VERIFICATION	4-51	REMOVAL & INSTALLATION	4-42
SENSOR/TRIGGER COIL	4-33	TESTING	4-38
SHIFT SWITCH	4-17	POWER TRIM/TILT RESERVOIR	2-6
TROUBLESHOOTING	4-10	FLUID LEVEL/CONDITION 2 -6	2-6
INTAKE MANIFOLD	3-77	RECOMMENDED LUBRICANT	2-6
REMOVAL & INSTALLATION	3-77	POWERHEAD	6-2
LINKAGE, CABLES AND SHAFTS	2-7	FLYWHEEL	6-2
LUBRICATION	2-7	POWERHEAD CLEANING & INSPECTION	6-104
RECOMMENDED LUBRICANT	2-7	POWERHEAD SERVICE	6-5
LUBRICATION SERVICE	2-5	TIMING BELT/CHAIN/GEAR	6-117
ELECTRIC STARTER MOTOR PINION	2-5	POWERHEAD BREAK-IN	6-129
ENGINE COVER LATCHES	2-6	BREAKING IN A POWERHEAD	6-129
ENGINE MOUNT CLAMP SCREWS	2-6	POWERHEAD CLEANING & INSPECTION	6-104
LINKAGE, CABLES AND SHAFTS	2-7	CLEANING	6-105
POWER TRIM/TILT RESERVOIR	2-6	CYLINDER BLOCK COMPONENT INSPECTION	6-110
STEERING (ARM/SHAFT & FRICTION SCREW)	2-10	CYLINDER HEAD COMPONENT INSPECTION	6-106
SWIVEL BRACKET	2-11	POWERHEAD SERVICE	6-6
TILT ASSEMBLY	2-11	3.5 HP MOTORS	6-6
LUBRICATION SYSTEM - 4-STROKE MOTORS	5-12	6 HP (128cc) 4-STROKE	6-8
DESCRIPTION & OPERATION	5-12	4/5/6 HP (138cc) 4-STROKE	6-14
OIL COOLER	5-27	6/8 HP 2-STROKE	6-18
OIL FLOW DIAGRAMS	5-12	8 HP 4-STROKE	6-23
OIL PRESSURE	5-19	9.9/15 HP 2-STROKE	6-28
OIL PRESSURE SWITCH & WARNING SYSTEM	5-27	9.9/15 HP 4-STROKE	6-33
OIL PUMP	5-20	25/30 HP 2-STROKE	6-39
MANUAL FUEL PRIMER	3-42	25 HP V2 4-STROKE	6-45
SERVICE	3-43	40/50/55 HP 2-CYL 2-STROKE	6-50
TESTING	3-43	25/30 HP (3-CYL) 4-STROKE	6-57
MAP SENSOR	3-100	40/50 HP 4-STROKE	6-64
REMOVAL & INSTALLATION	3-101	60/70 HP 4-STROKE	6-71
TESTING	3-101	90/115/140 HP 4-STROKE	6-79
MEASURING TOOLS	1-24	90/105/115 HP V4 2-STROKE	6-86
DEPTH GAUGES	1-26	150/175 HP V6 2-STROKE	6-86
DIAL INDICATORS	1-25	200/225/250 HP 4-STROKE	6-96
MICROMETERS & CALIPERS	1-24	PRE-WIRED BINNACLE MOUNT REMOTE UNITS	9-11
TELESCOPING GAUGES	1-26	OVERHAUL	9-11
MECHANICAL HYDRAULIC TILT ASSIST	8-33	PROPELLER	2-30
GAS-CHARGED TILT ASSIST CYLINDER	8-33	INSPECTION	2-31
MULTI-STAGE INDUCTION COMPONENTS	3-102	REMOVAL & INSTALLATION	2-31
NEUTRAL (SAFETY) SWITCH	3-105	PULSE LIMITER	5-6
REMOVAL & INSTALLATION	3-107	CHECKING	5-6
TESTING	3-106	QUIKSTART SYSTEM VERIFICATION	4-51
OIL COOLER - 4-STROKE	5-27	FUNCTIONAL CHECK	4-51
REMOVAL & INSTALLATION	5-27	GENERAL INFORMATION	4-51
OIL FLOW DIAGRAMS - 4-STROKE	5-12	RE-COMMISSIONING	2-89
OIL LEVEL SWITCH	4-113	REMOVAL FROM STORAGE	2-89
OIL METERING SYSTEM (OMS) - 2-STROKE MOTORS	5-2	RECTIFIER	4-59

10-20 INDEX

REMOVAL & INSTALLATION.....	4-60	GENERAL ENGINE SYSTEM - 90-250 HP.....	2-94
TESTING.....	4-59	IGNITION TESTING.....	4-144
REGULATIONS FOR YOUR BOAT.....	1-4	IGNITION TESTING - CARB. MOTORS.....	4-144
CAPACITY INFORMATION.....	1-4	LUBRICATION SERVICES.....	2-96
CERTIFICATE OF COMPLIANCE.....	1-5	MAINTENANCE INTERVALS.....	2-95
DOCUMENTING OF VESSELS.....	1-4	METRIC BOLTS - TYPICAL TORQUE VALUES.....	1-28
HULL IDENTIFICATION NUMBER.....	1-4	SHIFT ROD HEIGHT SPECIFICATIONS - 40-175 HP 2-STROKE.....	7-96
LENGTH OF BOATS.....	1-4	SPARK PLUG DIAGNOSIS.....	2-91
NUMBERING OF VESSELS.....	1-4	TUNE-UP - 1-CYL, 2-CYL & 25/30 HP 3-CYL.....	2-98
REGISTRATION OF BOATS.....	1-4	TUNE-UP - 40/50 HP 3-CYL & ALL L4, V4 & V6.....	2-99
SALES AND TRANSFERS.....	1-4	TWO-STROKE MOTOR FUEL:OIL RATIO.....	2-96
VENTILATION.....	1-5	U.S. STANDARD BOLTS - TYPICAL TORQUE VALUES.....	1-28
VENTILATION SYSTEMS.....	1-5	VALVE CLEARANCE.....	2-100
REGULATOR/RECTIFIER.....	4-62	3.5 HP (78cc) 1-CYL.....	6-130
REMOVAL & INSTALLATION.....	4-65	6 HP (128cc) 1-CYL 4-STROKE.....	6-130
TESTING.....	4-62	4/5/6 HP (138cc) 1-CYL 4-STROKE.....	6-131
REMOTE CONTROLS.....	9-2	6/8 HP 2-CYL 2-STROKE.....	6-132
INTRODUCTION.....	9-2	8 HP 2-CYL 4-STROKE.....	6-133
DESCRIPTION & OPERATION.....	9-2	9.9/15 HP 2-CYL 2-STROKE.....	6-133
CONCEALED SIDE MOUNT REMOTE UNITS.....	9-9	9.9/15HP 2-CYL 4-STROKE.....	6-134
DUAL HANDLE SURFACE MOUNT REMOTE UNITS.....		25/30 HP (521cc) 2-CYL 2-STROKE.....	6-135
FOR SINGLE MOTORS.....	9-7	25 HP (538cc) V2 4-STROKE.....	6-136
PRE-WIRED BINNACLE MOUNT REMOTE UNITS.....	9-11	25-55 HP (737cc) 2-CYL 2-STROKE.....	6-137
SMALL MOTOR STANDARD SURFACE REMOTE UNITS.....	9-5	25/30 HP (597cc) 3-CYL 4-STROKE.....	6-138
STANDARD SURFACE MOUNT REMOTE UNITS.....	9-3	40/50 HP 3-CYL 4-STROKE.....	6-140
REQUIRED SAFETY EQUIPMENT.....	1-5	60/70 HP 4-CYL 4-STROKE.....	6-142
FIRE EXTINGUISHERS.....	1-6	90-115 HP V4 2-SROKE.....	6-144
PERSONAL FLOTATION DEVICES.....	1-7	140 HP 4-CYL 4-STROKE.....	6-146
SOUND PRODUCING DEVICES.....	1-8	150/175 HP V6 2-STROKE.....	6-148
TYPES OF FIRES.....	1-5	200/225/250 HP V6 4-STROKE.....	6-149
VISUAL DISTRESS SIGNALS.....	1-8	STANDARD SURFACE MOUNT REMOTE UNITS.....	9-3
WARNING SYSTEM.....	1-7	OVERHAUL.....	9-3
RIGGING.....	9-14	STARTER MOTOR.....	4-90
SAFETY IN SERVICE.....	1-12	CLEANING & INSPECTION.....	4-103
DO'S.....	1-12	DISASSEMBLY & ASSEMBLY.....	4-96
DON'TS.....	1-12	GENERAL INFORMATION.....	4-90
SAFETY TOOLS.....	1-16	REMOVAL & INSTALLATION.....	4-92
EYE AND EAR PROTECTION.....	1-16	TESTING.....	4-90
WORK CLOTHES.....	1-17	STARTER MOTOR PINION.....	2-5
WORK GLOVES.....	1-16	LUBRICATION.....	2-5
SELF DIAGNOSTIC SYSTEM.....	3-51	RECOMMENDED LUBRICANT.....	2-5
READING & CLEARING CODES.....	3-51	STARTER MOTOR SOLENOID/RELAY SWITCH.....	4-105
SENSOR & CIRCUIT TESTS.....	3-55	REMOVAL & INSTALLATION.....	4-107
SHIFT POSITION SENSOR.....	3-107	TESTING.....	4-106
TESTING.....	3-107	STARTING CIRCUIT.....	4-71
SHIFT SWITCH.....	4-17	DESCRIPTION & OPERATION.....	4-71
DIODE & CONNECTOR TEST.....	4-18	SOLENOID/RELAY SWITCH.....	4-105
ELIMINATION TEST.....	4-17	STARTER MOTOR.....	4-90
GENERAL INFORMATION.....	4-17	TROUBLESHOOTING.....	4-71
SWITCH RESISTANCE TEST.....	4-17	STATOR/BATTERY CHARGE COIL.....	4-57
SHOP EQUIPMENT.....	1-16	REMOVAL & INSTALLATION.....	4-58
SAFETY TOOLS.....	1-16	TESTING.....	4-57
SMALL MOTOR STANDARD SURFACE REMOTE UNITS.....	9-5	STEERING.....	2-10
OVERHAUL.....	9-5	LUBRICATION.....	2-10
SPARK PLUG WIRES.....	2-47	RECOMMENDED LUBRICANT.....	2-10
REMOVAL & INSTALLATION.....	2-48	STORAGE.....	2-86
TESTING.....	2-47	RE-COMMISSIONING.....	2-89
SPARK PLUGS.....	2-43	WINTERIZATION.....	2-86
HEAT RANGE.....	2-43	SWIVEL BRACKET.....	2-11
INSPECTION & GAPPING.....	2-47	LUBRICATION.....	2-11
READING SPARK PLUGS.....	2-45	RECOMMENDED LUBRICANT.....	2-11
REMOVAL & INSTALLATION.....	2-44	TEMPERATURE SENSORS.....	3-98
SPECIFICATIONS.....		REMOVAL & INSTALLATION.....	3-100
CAPACITIES - 2-STROKE.....	2-97	TESTING.....	3-98
CAPACITIES - 4-STROKE.....	2-97	THERMOSTAT.....	5-47
CARBURETOR SET UP.....	3-47	EXPLODED VIEWS.....	5-48
CONVERSION FACTORS.....	1-27	REMOVAL & INSTALLATION.....	5-47
COOLING SYSTEM.....	5-62	THROTTLE BODY.....	3-77
GENERAL ENGINE.....	2-92	REMOVAL & INSTALLATION.....	3-77
GENERAL ENGINE SYSTEM - 3.5-115 HP.....	2-93	TILT ASSEMBLY.....	2-11

LUBRICATION	2-11	OIL METERING SYSTEM	5-2
RECOMMENDED LUBRICANT	2-11	STARTING SYSTEM	4-71
TILT LIMIT SWITCH (FASTRAK(r))	8-9	WARNING SYSTEM	4-109
ADJUSTMENT	8-9	TUNE-UP	2-39
TIMING AND SYNCHRONIZATION	2-48	COMPRESSION TESTS	2-41
HOMEMADE SYNCHRONIZATION TOOL	2-49	DE-CARBONING THE PISTONS	2-40
3.5 HP	2-50	ELECTRONIC IGNITION SYSTEMS	2-48
4/5/6 HP (138cc) 4-STROKE	2-50	INTRODUCTION TO TUNE-UPS	2-39
6/8 HP (164cc) 2-STROKE	2-51	SPARK PLUG WIRES	2-47
6 HP (128cc) & 8 HP 4-STROKE	2-52	SPARK PLUGS	2-43
9.9/15 HP 2-STROKE	2-53	TUNE-UP SEQUENCE	2-39
9.9/15 HP (302cc) 4-STROKE	2-55	UNDERSTANDING AND TROUBLESHOOTING	
25/30 HP 2-CYL	2-56	ELECTRICAL SYSTEMS	4-2
25 HP V2 4-STROKE	2-58	BASIC ELECTRICAL THEORY	4-2
40/50/55 HP 2-CYL	2-60	ELECTRICAL COMPONENTS	4-2
25/30 HP (3-CYL) 4-STROKE	2-64	ELECTRICAL SYSTEM PRECAUTIONS	4-8
40/50 HP 4-STROKE	2-67	ELECTRICAL TESTING	4-6
60/70 HP 4-STROKE	2-68	TEST EQUIPMENT	4-4
90/115/140 HP 4-STROKE	2-69	TROUBLESHOOTING ELECTRICAL SYSTEMS	4-6
90/105/115 HP V4 & 150/175 HP V6	2-70	WIRE AND CONNECTOR REPAIR	4-8
200/225/250 HP 4-STROKE	2-75	VALVE CLEARANCE	2-76
TIMING BELT	2-36	VALVE LASH	2-76
TIMING BELT/CHAIN/GEAR	6-117	VAPOR SEPARATOR TANK	3-86
REMOVAL & INSTALLATION	6-118	OVERHAUL	3-90
TOOLS	1-18	REMOVAL & INSTALLATION	3-88
ELECTRONIC TOOLS	1-23	TESTING	3-87
HAND TOOLS	1-19	WARNING HORN/BUZZER	4-113
MEASURING TOOLS	1-24	TESTING	4-113
OTHER COMMON TOOLS	1-22	WARNING SYSTEM	4-107
SPECIAL TOOLS	1-23	DESCRIPTION & OPERATION	4-107
TP SENSOR	3-102	OIL LEVEL SWITCH	4-113
REMOVAL & INSTALLATION	3-102	OIL PRESSURE SWITCH	4-112
TESTING	3-102	TEMPERATURE SENSORS	4-111
TRIM SENDING UNIT	8-9	TEMPERATURE SWITCHES	4-111
ADJUSTMENT	8-9	TROUBLESHOOTING	4-109
TRIM/TILT ASSEMBLY		WARNING HORN OR BUZZER	4-113
FASTRAK(r) 2-STROKE	8-10	WATER PRESSURE RELIEF VALVE	5-50
SMALL-MOTOR 2-STROKE	8-12	WATER PUMP	5-32
25/30 HP 4-STROKE	8-23	INSPECTION & OVERHAUL	5-47
40/50 HP 4-STROKE	8-24	REMOVAL & INSTALLATION	5-32
60/70 HP AND 90/115 HP 4-STROKE	8-26	3.5 HP	5-32
140 HP 4-STROKE	8-28	4/5/6 HP (138cc) 4-STROKE	5-33
200/225/250 HP 4-STROKE	8-30	6/8 HP (164cc)	5-34
TRIM/TILT SYSTEMS - 2-STROKE	8-2	6 HP (128cc) 4-STROKES	5-35
DESCRIPTION & OPERATION	8-3	8 HP 4-STROKES	5-35
INTRODUCTION	8-2	9.9/15 HP 2-STROKES	5-35
SYSTEM DIAGNOSIS	8-5	9.9/15 HP 4-STROKE	5-37
SYSTEM IDENTIFICATION	8-2	25/30 HP 2-STROKE	5-38
TILT LIMIT SWITCH	8-9	25 HP V2 4-STROKE	5-39
TRIM SENDING UNIT	8-9	25/30 HP (3-CYL) 4-STROKE	5-39
TRIM/TILT ASSEMBLY - FASTRAK(r)	8-10	40/50 HP (2-CYL) 2-STROKE	5-42
TRIM/TILT ASSEMBLY - SMALL-MOTOR CONVENTIONAL	8-12	40/50 HP 4-STROKE	5-39
WIRING	8-13	55 HP COMMERCIAL 2-STROKE	5-40
TRIM/TILT SYSTEMS - 4-STROKE	8-15	60-140 HP 4-STROKE	5-42
DESCRIPTION & OPERATION	8-15	90-175 V4/V6 2-STROKE	5-42
INTRODUCTION	8-15	200/225/250 HP 4-STROKE MODELS	5-46
SYSTEM DIAGNOSIS	8-18	WINTERIZATION	2-86
TRIM/TILT ASSEMBLY - 25/30 HP	8-23	PREPPING FOR STORAGE	2-86
TRIM/TILT ASSEMBLY - 40/50 HP	8-24	STORAGE CHECKLIST	2-87
TRIM/TILT ASSEMBLY - 60/70/90/115 HP	8-26	WIRING DIAGRAMS	4-114
TRIM/TILT ASSEMBLY - 140 HP	8-28	INDEX	4-114
TRIM/TILT ASSEMBLY - 200/225/250 HP	8-30	SWITCHES & INSTRUMENTS	4-142
TROUBLESHOOTING		TRIM/TILT - 2-STROKE	8-13
BASIC OPERATING PRINCIPLES	1-13	TRIM/TILT - 4-STROKE	8-16
CARBURETOR	3-13	1-CYL MOTORS	4-114
CHARGING SYSTEM	4-54	2-CYL MOTORS	4-116
COOLING SYSTEM	5-29	3-CYL MOTORS	4-126
EFI	3-48	4-CYL MOTORS	4-130
ELECTRICAL SYSTEMS	4-6	6-CYL MOTORS	4-136
IGNITION SYSTEMS	4-10		