



Presents

Repair Manuals from

SELOC.

Contents of this manual:

1	GENERAL INFORMATION, SAFETY AND TOOLS	HOW TO USE THIS MANUAL	1-2
		BOATING SAFETY	1-4
		BOATING EQUIPMENT (NOT REQUIRED BUT RECOMMENDED)	1-10
		SAFETY IN SERVICE	1-12
		TROUBLESHOOTING	1-13
		SHOP EQUIPMENT	1-17
		TOOLS	1-19
		FASTENERS, MEASUREMENT, AND CONVERSIONS	1-27
		SPECIFICATIONS	1-28
		<hr/>	
2	MAINTENANCE AND TUNE-UP	GENERAL INFORMATION	2-2
		LUBRICATION	2-4
		ENGINE MAINTENANCE	2-9
		BOAT MAINTENANCE	2-29
		TUNE-UP	2-32
		TIMING & SYNCHRONIZATION	2-41
		STORAGE	2-75
		CLEARING A SUBMERGED MOTOR	2-78
		SPECIFICATIONS	2-80
		<hr/>	
3	FUEL SYSTEM	FUEL & COMBUSTION BASICS	3-2
		FUEL TANK & LINES	3-7
		CARBURETED FUEL SYSTEM	3-12
		ELECTRONIC FUEL INJECTION (EFI)	3-43
		OPTIMAX DIRECT FUEL INJECTION (DFI)	3-71
		FUEL/OIL ROUTING DIAGRAMS (EFI)	3-106
		AIR/FUEL ROUTING DIAGRAMS	3-107
		SPECIFICATIONS	3-111
		<hr/>	
4	IGNITION & ELECTRICAL SYSTEMS	UNDERSTANDING & TROUBLESHOOTING	
		ELECTRICAL SYSTEMS	4-2
		IGNITION SYSTEMS	4-8
		CHARGING CIRCUIT	4-37
		SPECIFICATIONS	
		STARTER CIRCUIT	4-48
		ELECTRICAL SWITCH/SOLENOID SERVICE	4-58
		WIRING DIAGRAMS	4-61
<hr/>			
5	COOLING & LUBRICATION	OIL INJECTION SYSTEM	5-2
		COOLING SYSTEM	5-11
		WARNING SYSTEMS	5-31
		COOLING SYSTEM FLOW SCHEMATICS	5-41
		SPECIFICATIONS	5-44

CONTENTS

POWERHEAD MECHANICAL 6-2
POWERHEAD RECONDITIONING 6-57
POWERHEAD BREAK-IN 6-69
SPECIFICATION CHARTS 6-70

POWERHEAD

6

LOWER UNIT 7-2
JET DRIVE 7-88

LOWER UNIT

7

MECHANICAL TILT (UNASSISTED) 8-2
GAS ASSIST TILT SYSTEM 8-6
POWER TILT/TRIM - SMALL MOTOR SINGLE RAM INTEGRAL 8-10
POWER TILT/TRIM - MID-RANGE MOTOR SINGLE RAM INTEGRAL 8-14
POWER TILT/TRIM SYSTEM - 3 RAM INTEGRAL 8-23

TRIM AND TILT

8

REMOTE CONTROLS - MECHANICAL UNITS 9-2
REMOTE CONTROLS - DIGITAL THROTTLE & SHIFT (DTS) UNITS 9-11
TILLER HANDLE 9-16
REMOTE CONTROL WIRING 9-22

REMOTE CONTROL

9

HAND REWIND STARTER 10-2

HAND REWIND STARTER

10

MASTER INDEX 10-15

MASTER INDEX

<p>ADDITIONAL REMOTE UNITS - MECHANICAL 9-6 EXPLODED VIEWS 9-6</p> <p>AIR COMPRESSOR - DFI 3-75 AIR/FUEL PRESSURE TESTING 3-75 DESCRIPTION & OPERATION 3-75 OVERHAUL 3-80 REMOVAL & INSTALLATION 3-78</p> <p>AIR FILTER (OPTIMAX AIR COMPRESSOR) 2-27 REMOVAL & INSTALLATION 2-27</p> <p>AIR PRESSURE REGULATOR - DFI 3-81 DESCRIPTION & OPERATION 3-81 REMOVAL & INSTALLATION 3-82 TESTING 3-81</p> <p>AIR TEMPERATURE SENSOR (ATS) - EFI 3-56 DESCRIPTION & OPERATION 3-56 REMOVAL & INSTALLATION 3-56 TESTING 3-56</p> <p>AIR/FUEL ROUTING DIAGRAMS 3-107 1.5L OPTIMAX 3-107 2.5L OPTIMAX 3-108 3.0L OPTIMAX (THRU 2002) 3-109 3.0L OPTIMAX (2003 & LATER) 3-110</p> <p>ALTERNATOR (EXTERNAL) 4-42 DESCRIPTION & OPERATION 4-42 REMOVAL & INSTALLATION 4-44 TESTING 4-43</p> <p>ANODES 2-24 INSPECTION 2-25 SERVICING 2-25</p> <p>BASIC ELECTRICAL THEORY 4-2 HOW DOES ELECTRICITY WORK 4-2 OHM'S LAW 4-2</p> <p>BATTERY CHARGERS 4-42 CHARGING PRECAUTIONS 4-41 CONSTRUCTION 4-41 LOCATION 4-41 MAINTENANCE 2-29 MARINE BATTERIES 4-40 RATINGS 4-41 REPLACING CABLES 4-42 STORAGE 2-31 TESTING 2-30</p> <p>BOAT MAINTENANCE 2-29 BATTERIES 2-29 FIBERGLASS HULL 2-31 INTERIOR 2-32</p> <p>BOATING EQUIPMENT (NOT REQUIRED BUT RECOMMENDED) ... 1-10 ANCHORS 1-10 BAILING DEVICES 1-10 COMPASS 1-10 FIRST AID KIT 1-10 OAR/PADDLE 1-10 TOOLS AND SPARE PARTS 1-12 VHF-FM RADIO 1-10</p> <p>BOATING SAFETY 1-4 COURTESY MARINE EXAMINATIONS 1-10 REGULATIONS FOR YOUR BOAT 1-4 REQUIRED SAFETY EQUIPMENT 1-5</p> <p>CARBURETED FUEL SYSTEM 3-12 DESCRIPTION & OPERATION 3-12 ENRICHENER SYSTEMS 3-39 FUEL PUMP 3-35 TROUBLESHOOTING 3-15</p>	<p>2.5/3.3 HP MODELS 3-18 CLEANING & INSPECTION 3-20 OVERHAUL 3-18 REMOVAL & INSTALLATION 3-18</p> <p>4/5 HP MODELS 3-20 CLEANING & INSPECTION 3-22 OVERHAUL 3-21 REMOVAL & INSTALLATION 3-20</p> <p>6/8, 9.9/10/15 & 20/20 JET/25 HP MODELS 3-23 CLEANING & INSPECTION 3-26 OVERHAUL 3-24 REMOVAL & INSTALLATION 3-23</p> <p>30/40 HP 2-CYL MODELS 3-27 CLEANING & INSPECTION 3-29 OVERHAUL 3-28 REMOVAL & INSTALLATION 3-27</p> <p>40-125 HP 3 & 4-CYL MODELS 3-30 OVERHAUL 3-31 REMOVAL & INSTALLATION 3-30</p> <p>150/200 HP (2.5L) V6 MODELS 3-32 CLEANING & INSPECTION 3-35 OVERHAUL 3-33 REMOVAL & INSTALLATION 3-32</p> <p>CHARGING CIRCUIT 4-37 ALTERNATOR (EXTERNAL) 4-42 BATTERY 4-40 DESCRIPTION & OPERATION 4-37 RECTIFIER 4-45 REGULATOR/RECTIFIER 4-47 SERVICE PRECAUTIONS 4-37 SPECIFICATIONS 4-39 STATOR/BATTERY CHARGE COIL (UNDER FLYWHEEL) 4-42 TROUBLESHOOTING 4-38</p> <p>CLEARING A SUBMERGED MOTOR. 2-78</p> <p>COMMANDER SIDE MOUNT REMOTE CONTROL BOX - MECHANICAL .. 9-2 ASSEMBLY 9-5 CLEANING & INSPECTION 9-5 DESCRIPTION & OPERATION 9-2 DISASSEMBLY 9-3 REMOVAL & INSTALLATION 9-2 TROUBLESHOOTING 9-2</p> <p>COMPRESSION TESTING 2-33 LEAK TESTING 2-34 LOW COMPRESSION 2-34 TUNE-UP COMPRESSION CHECK 2-33</p> <p>CONTROL CABLES 9-20 REMOVAL & INSTALLATION 9-20</p> <p>COOLING SYSTEM 5-11 DESCRIPTION & OPERATION 5-12 FLUSHING JET DRIVES 2-12 FLUSHING THE COOLING SYSTEM 2-10 THERMOSTAT 5-15 TROUBLESHOOTING 5-12 WATER PUMP 5-19</p> <p>COOLING SYSTEM FLOW SCHEMATICS 5-41</p> <p>CRANKSHAFT POSITION SENSOR (CPS) DESCRIPTION & OPERATION 4-27 DFI 3-85 EFI 3-58 REMOVAL & INSTALLATION 4-27 TESTING 4-27</p> <p>DESCRIPTION & OPERATION AIR COMPRESSOR - DFI 3-75 AIR PRESSURE REGULATOR - DFI 3-81 AIR TEMPERATURE SENSOR (ATS) - EFI 3-56</p>
---	--

10-16 MASTER INDEX

ALTERNATOR	4-42
CARBURETOR	3-12
CHARGING CIRCUIT	4-37
COMMANDER SIDE MOUNT REMOTE	9-2
COOLING SYSTEM	5-11
CRANKSHAFT POSITION SENSOR (CPS)	4-27
DETONATION (KNOCK) SENSOR & MODULE - EFI	3-59
DIGITAL THROTTLE & SHIFT	9-11
DIRECT INJECTOR - DFI	3-89
EFI	3-43
ELECTRIC FUEL PUMP - DFI	3-97
ELECTRIC FUEL PUMP - EFI	3-65
ELECTRONIC CONTROL MODULE (ECM/PCM) - DFI	3-88
ELECTRONIC CONTROL MODULE (ECM/PCM) - EFI	3-60
ELECTRONIC IGNITION SYSTEMS	4-10
ENGINE TEMPERATURE SENSORS (ETS) - EFI	3-54
FUEL INJECTOR - DFI	3-91
FUEL INJECTORS, FUEL RAIL & INTAKE MANIFOLD - EFI	3-45
FUEL PRESSURE REGULATOR - DFI	3-92
FUEL PRESSURE REGULATOR - EFI	3-69
FUEL (AND AIR) RAIL - DFI	3-99
GAS ASSIST TILT SYSTEM	8-6
HAND REWIND STARTER	10-2
IGNITION COILS	4-28
IGNITION MODULE (CD UNIT/CDM)	4-31
MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR - DFI	3-86
MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR - EFI	3-57
MECHANICAL FUEL PUMP - DFI	3-93
MECHANICAL FUEL PUMP - EFI	3-61
MECHANICAL TILT (UNASSISTED)	8-2
OIL INJECTION SYSTEM	5-2
OIL LEVEL SENSOR (SWITCH)	5-40
OPTIMAX DFI	3-71
PTT - SMALL MOTOR, SINGLE RAM INTEGRAL	8-10
PTT - MID-RANGE MOTOR, SINGLE RAM INTEGRAL	8-14
PTT - 3 RAM INTEGRAL	8-23
RECTIFIER	4-45
SHIFT INTERRUPT SWITCH - DFI	3-87
STARTER MOTOR	4-52
STARTER MOTOR CIRCUITS	4-48
STARTER RELAY/SOLENOID	4-50
STATOR/BATTERY CHARGE COIL (UNDER FLYWHEEL)	4-42
STATOR/CHARGE COIL	4-22
TEMPERATURE SENSORS - DFI	3-82
TEMPERATURE SWITCH (WARNING SYSTEM)	5-38
THROTTLE POSITION SENSOR (TPS) - DFI	3-85
THROTTLE POSITION SENSOR (TPS) - EFI	3-58
TILLER HANDLE	9-16
TRACKER VALVE (V6 ONLY) - DFI	3-100
TRIGGER COILS	4-25
VAPOR SEPARATOR - DFI	3-101
VAPOR SEPARATOR TANK (VST) - EFI	3-66
WATER SENSOR - EFI	3-60
DETONATION (KNOCK) SENSOR & MODULE - EFI	3-59
DESCRIPTION & OPERATION	3-59
TESTING	3-60
DIGITAL REMOTE UNITS - DTS	9-14
EXPLODED VIEWS	9-14
DIRECT INJECTOR - DFI	3-89
DESCRIPTION & OPERATION	3-89
REMOVAL & INSTALLATION	3-90
TESTING	3-90
DRIVE BELT	2-25
INSPECTION	2-25
REMOVAL & INSTALLATION	2-26

ELECTRIC FUEL PUMP(S)	
DFI	3-97
DESCRIPTION & OPERATION	3-97
REMOVAL & INSTALLATION	3-98
TESTING	3-97
EFI	3-65
DESCRIPTION & OPERATION	3-65
REMOVAL & INSTALLATION	3-66
TESTING	3-65
ELECTRICAL COMPONENTS	4-2
GROUND	4-3
LOAD	4-4
POWER SOURCE	4-2
PROTECTIVE DEVICES	4-3
SWITCHES & RELAYS	4-3
WIRING & HARNESSSES	4-4
ELECTRICAL SWITCH/SOLENOID SERVICE	4-59
IGNITION KEYSWITCH	4-59
KILL SWITCH	4-60
NEUTRAL SAFETY SWITCH	4-60
START BUTTON	4-60
ELECTRICAL SYSTEM CHECKS	2-40
BATTERY	2-40
INTERNAL WIRING HARNESS	3-40
STARTER MOTOR	3-40
ELECTRICAL TESTING	4-6
OPEN CIRCUITS	4-6
RESISTANCE	4-6
SHORT CIRCUITS	4-7
VOLTAGE	4-6
VOLTAGE DROP	4-6
ELECTRONIC CONTROL MODULE (ECM/PCM)	
DFI	3-88
DESCRIPTION & OPERATION	3-88
REMOVAL & INSTALLATION	3-89
EFI	3-60
DESCRIPTION & OPERATION	3-60
REMOVAL & INSTALLATION	3-61
ELECTRONIC FUEL INJECTION (EFI)	3-43
AIR TEMPERATURE SENSOR (ATS)	3-56
CRANKSHAFT POSITION SENSOR (CPS)	3-58
DESCRIPTION & OPERATION	3-43
DETONATION (KNOCK) SENSOR & MODULE	3-59
ELECTRIC FUEL PUMP	3-65
ELECTRONIC/ENGINE CONTROL MODULE (ECM)	3-60
ENGINE TEMPERATURE SENSORS (ETS)	3-54
FUEL INJECTORS, FUEL RAIL & INTAKE MANIFOLD	3-45
FUEL PRESSURE REGULATOR	3-69
MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR	3-57
MECHANICAL FUEL PUMP	3-61
THROTTLE POSITION SENSOR (TPS)	3-58
TROUBLESHOOTING	3-43
VAPOR SEPARATOR TANK (VST) ASSEMBLY	3-66
WATER SENSOR	3-60
ELECTRONIC IGNITION SYSTEMS	4-8
COMPONENT TESTING	4-13
DESCRIPTION & OPERATION	4-10
SYSTEM TYPES & COMPONENTS	4-8
TROUBLESHOOTING	4-11
ELECTRONIC SHIFT CONTROL (ESC) - DTS	9-12
ACTUATOR ADJUSTMENT	9-13
SHIFT ACTUATOR REMOVAL & INSTALLATION	9-12
SHIFT OVERRIDE PROCEDURE	9-13
ELECTRONIC THROTTLE CONTROL (ETC) - DTS	9-13
REMOVAL & INSTALLATION	9-13

ENGINE & SERIAL NUMBER IDENTIFICATION	2-2	EFI	3-69
ENGINE COVERS	2-9	DESCRIPTION & OPERATION	3-69
REMOVAL & INSTALLATION	2-9	REMOVAL & INSTALLATION	3-70
ENGINE MAINTENANCE	2-9	TESTING	3-70
AIR FILTER (OPTIMAX)	2-27	FUEL PUMP - CARB	3-35
ANODES (ZINCS)	2-24	OVERHAUL	3-38
COOLING SYSTEM	2-10	REMOVAL & INSTALLATION	3-37
DRIVE BELT	2-25	TESTING	3-35
ENGINE COVERS	2-9	FUEL PUMP(S)	
FUEL FILTER/FUEL WATER SEPARATOR	2-13	ELECTRIC	
JET DRIVE IMPELLER	2-23	DFI	3-97
OIL FILTER (INLINE FILTER)	2-28	EFI	3-65
PROPELLER	2-16	MECHANICAL	
2-STROKE OIL	2-12	CARB	3-35
ENGINE TEMPERATURE SENSORS (ETS) - EFI	3-54	DFI	3-93
DESCRIPTION & OPERATION	3-54	EFI	3-61
REMOVAL & INSTALLATION	3-56	FUEL SYSTEM CHECKS	2-41
TESTING	3-54	FUEL INSPECTION	2-41
ENRICHENER SYSTEMS - CARB	3-39	FUEL TANK	3-7
DESCRIPTION & OPERATION	3-39	SERVICE	3-7
FUEL PRIMER HOSE ROUTING DIAGRAMS	3-40	FUEL TANK & LINES	3-7
TESTING THE ELECTRIC PRIMER	3-40	FUEL LINES & FITTINGS	3-9
THERMAL AIR VALVE CIRCUIT	3-40	FUEL TANK	3-7
EXHAUST GASES	7-3	FUEL/OIL ROUTING DIAGRAMS (EFI)	3-106
FASTENERS, MEASUREMENTS AND CONVERSIONS	1-27	2.5L EFI MOTORS (2002 & LATER)	3-106
BOLTS, NUTS AND OTHER THREADED RETAINERS	1-27	3.0L EFI MOTORS (2002 & LATER)	3-106
STANDARD AND METRIC MEASUREMENTS	1-27	GAS ASSIST DAMPER	8-6
TORQUE	1-27	OVERHAUL (55-90 HP ONLY)	8-8
FIBERGLASS HULL	2-31	REMOVAL & INSTALLATION	8-6
INSPECTION & CARE	2-31	TESTING	8-6
FLYWHEEL	4-18	GAS ASSIST TILT SYSTEM	8-6
REMOVAL & INSTALLATION	4-18	DESCRIPTION & OPERATION	8-6
FUEL & COMBUSTION BASICS	3-2	GAS ASSIST DAMPER	8-6
COMBUSTION	3-6	INTRODUCTION	8-6
FUEL	3-2	GEARCASE - 2.5/3.3 HP MODELS (NON-SHIFTING)	7-4
FUEL SYSTEM PRESSURIZATION	3-4	ASSEMBLY	7-7
FUEL SYSTEM SERVICE CAUTIONS	3-2	CLEANING & INSPECTION	7-7
FUEL (AND AIR) RAIL - DFI	3-99	DISASSEMBLY	7-4
DESCRIPTION & OPERATION	3-99	REMOVAL & INSTALLATION	7-4
REMOVAL & INSTALLATION	3-99	SHIMMING	7-7
FUEL FILTER/FUEL WATER SEPARATOR	2-13	GEARCASE - 2.5/3.3 HP AND 4/5/6 HP MODELS (SHIFTING)	7-8
RELEASING FUEL SYSTEM PRESSURE	2-14	ASSEMBLY	7-12
SERVICE	2-15	CLEANING & INSPECTION	7-12
FUEL INJECTOR - DFI	3-91	DISASSEMBLY	7-9
DESCRIPTION & OPERATION	3-91	REMOVAL & INSTALLATION	7-8
REMOVAL & INSTALLATION	3-91	SHIMMING	7-16
TESTING	3-91	GEARCASE - 6-25 HP MODELS	7-16
FUEL INJECTORS, FUEL RAIL & INTAKE MANIFOLD - EFI	3-45	ASSEMBLY	7-20
CLEANING & INSPECTION	3-53	CLEANING & INSPECTION	7-20
DESCRIPTION & OPERATION	3-45	DISASSEMBLY	7-18
REMOVAL & INSTALLATION	3-47	REMOVAL & INSTALLATION	7-16
TESTING THE INJECTORS	3-46	SHIMMING	7-26
FUEL PRESSURE REGULATOR - EFI	3-69	GEARCASE - 30/40 HP (2-CYL) & 40/50 HP (3-CYL) MODELS	7-26
DESCRIPTION & OPERATION	3-69	ASSEMBLY	7-30
REMOVAL & INSTALLATION	3-70	CLEANING & INSPECTION	7-30
TESTING	3-70	DISASSEMBLY	7-27
FUEL LINES & FITTINGS	3-9	REMOVAL & INSTALLATION	7-26
SERVICE	3-11	SHIMMING	7-34
TESTING	3-9	GEARCASE - 55/60 (3-CYL) NON-BIGFOOT, 60 HP BIGFOOT	
FUEL PRESSURE REGULATOR		AND 75-125 HP MODELS	7-34
DFI	3-92	ASSEMBLY	7-44
DESCRIPTION & OPERATION	3-92	CLEANING & INSPECTION	7-40
REMOVAL & INSTALLATION	3-92	DISASSEMBLY	7-36
TESTING	3-92	REMOVAL & INSTALLATION	7-35
		SHIMMING	7-48

10-18 MASTER INDEX

GEARCASE - 135-200 HP (2.5L) V6 MODELS	7-51	IGNITION SYSTEM	2-39
ASSEMBLY	7-56	INSPECTION	2-39
CLEANING & INSPECTION	7-56	IGNITION SYSTEMS	4-8
DISASSEMBLY	7-52	CRANKSHAFT POSITION SENSOR (CPS)	4-27
REMOVAL & INSTALLATION	7-51	DIAGNOSTIC CHARTS	4-13
SHIMMING	7-62	ELECTRONIC IGNITION SYSTEMS	4-8
GEARCASE - 200-250 HP (3.0L) V6 MODELS	7-65	FLYWHEEL	4-18
ASSEMBLY	7-73	GENERAL INFORMATION	4-8
CLEANING & INSPECTION	7-70	IGNITION COILS	4-28
DISASSEMBLY	7-66	IGNITION MODULE (CD UNIT/CDM)	4-31
REMOVAL & INSTALLATION	7-65	SPECIFICATIONS	4-36
SHIMMING	7-76	STATOR/CHARGE COIL	4-22
GEARCASE REPAIR & OVERHAUL TIPS	7-3	TRIGGER COILS	4-25
GENERAL INFORMATION	2-2	JET DRIVE	7-79
BEFORE/AFTER EACH USE	2-3	ADJUSTMENTS	7-86
ENGINE & SERIAL NUMBER IDENTIFICATION	2-2	ASSEMBLY	7-84
MAINTENANCE COVERAGE	2-2	BEARING CARRIER OVERHAUL	7-81
MAINTENANCE EQUALS SAFETY	2-2	CLEANING & INSPECTION	7-82
OUTBOARDS ON SAIL BOATS	2-2	DESCRIPTION & OPERATION	7-79
HAND REWIND STARTER	10-2	DRIVE AND/OR IMPELLER REMOVAL	7-80
DESCRIPTION & OPERATION	10-2	DRIVE AND/OR IMPELLER INSTALLATION	7-84
TROUBLESHOOTING	10-2	DRIVE UNIT DISASSEMBLY	7-81
2.5/3.3 HP MODELS	10-2	JET DRIVE BEARING	2-8
ASSEMBLY & INSTALLATION	10-3	JET DRIVE IMPELLER	2-23
CLEANING & INSPECTION	10-2	JET DRIVE ADJUSTMENTS	7-86
REMOVAL & DISASSEMBLY	10-2	GATE LINKAGE ADJUSTMENTS	7-86
4/5 HP MODELS	10-4	JET DRIVE BEARING	2-8
ASSEMBLY & INSTALLATION	10-6	BEARING LUBRICATION	2-8
CLEANING & INSPECTION	10-6	GREASE REPLACEMENT	2-8
REMOVAL & DISASSEMBLY	10-4	RECOMMENDED LUBRICANT	2-8
6-25 HP MODELS	10-8	JET DRIVE IMPELLER	2-23
ASSEMBLY	10-11	CHECKING CLEARANCE	2-23
CLEANING & INSPECTION	10-10	INSPECTION	2-23
DISASSEMBLY	10-10	KILL SWITCH	4-60
REMOVAL & ROPE REPLACEMENT	10-8	TESTING	4-60
ROPE REPLACEMENT & INSTALLATION	10-11	KNOCK SENSOR & MODULE - EFI	3-59
30 HP & LARGER MODELS	10-11	DESCRIPTION & OPERATION	3-59
ASSEMBLY & INSTALLATION	10-14	TESTING	3-60
CLEANING & INSPECTION	10-14	LOWER UNIT	
REMOVAL & DISASSEMBLY	10-11	2.5/3.3 HP MODELS (NON-SHIFTING)	7-4
HOW TO USE THIS MANUAL	1-2	2.5/3.3 HP AND 4/5/6 HP MODELS (SHIFTING)	7-8
AVOIDING COMMON MISTAKES	1-2	6-25 HP MODELS	7-16
AVOIDING TROUBLE	1-2	30/40 HP (2-CYL) & 40/50 HP (3-CYL) MODELS	7-26
CAN YOU DO IT?	1-2	55/60 (3-CYL) NON-BIGFOOT, 60 HP BIGFOOT AND	
DIRECTIONS AND LOCATIONS	1-2	75-125 HP MODELS	7-34
MAINTENANCE OR REPAIR?	1-2	135-200 HP (2.5L) V6 MODELS	7-51
PROFESSIONAL HELP	1-2	200-250 HP (3.0L) V6 MODELS	7-65
PURCHASING PARTS	1-2	DRAINING & FILLING	2-7
WHERE TO BEGIN	1-2	EXHAUST GASES	7-3
IGNITION COILS	4-28	GEARCASE REPAIR & OVERHAUL TIPS	7-3
DESCRIPTION & OPERATION	4-28	GENERAL INFORMATION	7-2
REMOVAL & INSTALLATION	4-30	LEVEL & CONDITION	2-7
TESTING	4-28	RECOMMENDATIONS	2-6
IGNITION DIAGNOSTIC CHARTS	4-13	SHIFTING PRINCIPLES	7-2
2-CYL	4-13	TROUBLESHOOTING	7-3
3- 4- & 6- CYL W/CDM IGNITIONS	4-14	LUBRICATING THE MOTOR	2-5
2002 & LATER EFI 6-CYL W/BATTERY DRIVEN IGNITIONS	4-16	LUBRICATION	2-4
OPTIMAX	4-17	ABOUT LUBRICATION	2-4
IGNITION KEYSWITCH	4-59	JET DRIVE BEARING	2-8
TESTING	4-59	LOWER UNIT	2-6
IGNITION MODULE (CD UNIT/CDM)	4-31	LUBRICATING THE MOTOR	2-5
DESCRIPTION & OPERATION	4-31	LUBRICATION INSIDE THE BOAT	2-5
REMOVAL & INSTALLATION	4-33	POWER TRIM/TILT RESERVOIR	2-9
TESTING	4-32	LUBRICATION INSIDE THE BOAT	2-5

<p>MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR</p> <ul style="list-style-type: none"> DFI 3-86 DESCRIPTION & OPERATION 3-86 REMOVAL & INSTALLATION 3-87 TESTING 3-87 EFI 3-57 DESCRIPTION & OPERATION 3-57 REMOVAL & INSTALLATION 3-58 TESTING 3-57 <p>MECHANICAL FUEL PUMP</p> <ul style="list-style-type: none"> DFI 3-93 DESCRIPTION & OPERATION 3-93 TESTING 3-93 OVERHAUL 3-96 REMOVAL & INSTALLATION 3-95 TESTING 3-93 EFI 3-61 DESCRIPTION & OPERATION 3-61 OVERHAUL 3-64 REMOVAL & INSTALLATION 3-64 TESTING 3-62 <p>MECHANICAL TILT (UNASSISTED) 8-2</p> <ul style="list-style-type: none"> DESCRIPTION & OPERATION 8-2 INTRODUCTION 8-2 SERVICING 8-2 <p>NEUTRAL SAFETY SWITCH 4-60</p> <ul style="list-style-type: none"> TESTING 4-60 <p>OIL & TEMPERATURE WARNING SYSTEMS 5-31</p> <ul style="list-style-type: none"> CHECKING THE CIRCUIT 5-31 OPTIMAX & CARUBURETED/EFI V6 MOTORS TROUBLESHOOTING AN ACTIVATION 5-32 <p>OIL FILTER (INLINE FILTER FOR INJECTION SYSTEM) 2-28</p> <ul style="list-style-type: none"> REMOVAL & INSTALLATION 2-28 <p>OIL INJECTION SYSTEM 5-2</p> <ul style="list-style-type: none"> GENERAL INFORMATION 5-2 OIL LINES 5-11 OIL PUMP 5-8 OIL TANK 5-4 TROUBLESHOOTING 5-4 <p>OIL LEVEL SENSOR (SWITCH) 5-40</p> <ul style="list-style-type: none"> DESCRIPTION & TESTING 5-40 <p>OIL LINES 5-11</p> <ul style="list-style-type: none"> CAUTIONS 5-11 <p>OIL PUMP 5-8</p> <ul style="list-style-type: none"> BLEEDING THE OIL INJECTION SYSTEM 5-9 OIL PUMP CONTROL ROD ADJUSTMENT 5-8 REMOVAL & INSTALLATION 5-8 TESTING OIL PUMP DISCHARGE RATE 5-10 <p>OIL TANK 5-4</p> <ul style="list-style-type: none"> CLEANING & INSPECTION 5-7 REMOVAL & INSTALLATION 5-4 <p>OPTIMAX DIRECT FUEL INJECTION (DFI) 3-71</p> <ul style="list-style-type: none"> AIR COMPRESSOR 3-75 AIR PRESSURE REGULATOR 3-81 CRANKSHAFT POSITION SENSOR (CPS) 3-85 DESCRIPTION & OPERATION 3-71 DIRECT INJECTOR 3-89 ELECTRIC FUEL PUMP(S) 3-97 ELECTRONIC CONTROL MODULE (ECM/PCM) 3-88 FUEL (AND AIR) RAIL 3-99 FUEL INJECTOR 3-91 FUEL PRESSURE REGULATOR 3-92 MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR 3-86 MECHANICAL FUEL PUMP 3-93 SHIFT INTERRUPT SWITCH 3-87 	<ul style="list-style-type: none"> TEMPERATURE SENSORS 3-82 THROTTLE BODY, AIR PLENUM & REED BLOCK 3-104 THROTTLE POSITION SENSOR (TPS) 3-85 TRACKER VALVE 3-100 TROUBLESHOOTING 3-73 VAPOR SEPARATOR 3-101 <p>POWER TRIM/TILT RESERVOIR 2-9</p> <p>POWER TILT/TRIM - SMALL MOTOR, SINGLE RAM INTEGRAL 8-10</p> <ul style="list-style-type: none"> DESCRIPTION & OPERATION 8-10 INTRODUCTION 8-10 PTT HYDRAULIC CYLINDER 8-13 PTT HYDRAULIC PUMP 8-13 TROUBLESHOOTING 8-11 <p>POWER TILT/TRIM - MID-RANGE MOTOR, SINGLE RAM INTEGRAL 8-14</p> <ul style="list-style-type: none"> DESCRIPTION & OPERATION 8-14 INTRODUCTION 8-14 PTT ASSEMBLY 8-18 TROUBLESHOOTING 8-15 <p>POWER TILT/TRIM - 3 RAM INTEGRAL 8-23</p> <ul style="list-style-type: none"> DESCRIPTION & OPERATION 8-23 INTRODUCTION 8-23 PTT ASSEMBLY 8-27 TILT ROD 8-31 TRIM MOTOR & PUMP 8-32 TRIM ROD & CAP 8-28 TRIM SENDER & GAUGE 8-33 TROUBLESHOOTING 8-24 <p>POWERHEAD BREAK-IN 6-69</p> <ul style="list-style-type: none"> BREAK-IN PROCEDURES 6-69 <p>POWERHEAD MECHANICAL 6-2</p> <ul style="list-style-type: none"> GENERAL INFORMATION 6-2 CLEANLINESS 6-3 POWERHEAD COMPONENTS 6-3 POWERHEAD OVERHAUL 6-2 2.5/3.3 HP 6-3 CLEANING & INSPECTION 6-5 DISSASSEMBLY & ASSEMBLY 6-3 REMOVAL & INSTALLATION 6-3 4/5 HP 6-5 CLEANING & INSPECTION 6-6 DISSASSEMBLY & ASSEMBLY 6-5 REMOVAL & INSTALLATION 6-5 6/8 & 9.9/10/15 HP 6-8 CLEANING & INSPECTION 6-12 DISSASSEMBLY & ASSEMBLY 6-8 REMOVAL & INSTALLATION 6-8 20/20 JET/25 HP 6-12 CLEANING & INSPECTION 6-16 DISSASSEMBLY & ASSEMBLY 6-13 REMOVAL & INSTALLATION 6-12 30/40 HP 2-CYLINDER 6-17 CLEANING & INSPECTION 6-22 DISSASSEMBLY & ASSEMBLY 6-18 REMOVAL & INSTALLATION 6-17 40/40 JET/50/55/60 HP 3-CYLINDER 6-22 CLEANING & INSPECTION 6-27 DISSASSEMBLY & ASSEMBLY 6-23 REMOVAL & INSTALLATION 6-22 75/65 JET/90 HP & 80 JET/115/125 HP 6-27 CLEANING & INSPECTION 6-35 DISSASSEMBLY & ASSEMBLY 6-28 REMOVAL & INSTALLATION 6-27 75/90/115 HP OPTIMAX 6-35 CLEANING & INSPECTION 6-42
--	---

10-20 MASTER INDEX

DISSASSEMBLY & ASSEMBLY	6-37	RECTIFIER	4-45
REMOVAL & INSTALLATION	6-35	DESCRIPTION & OPERATION	4-45
135-200 HP (2.5L) V6	6-42	REMOVAL & INSTALLATION	4-46
CLEANING & INSPECTION	6-49	TESTING	4-45
DISSASSEMBLY & ASSEMBLY	6-44	REGULATOR/RECTIFIER	4-47
REMOVAL & INSTALLATION	6-42	REMOVAL & INSTALLATION	4-48
200-250 HP (3.0L) V6	6-49	TESTING	4-47
CLEANING & INSPECTION	6-57	REMOTE CONTROL WIRING	9-22
DISSASSEMBLY & ASSEMBLY	6-51	INDEX	9-22
REMOVAL & INSTALLATION	6-49	REMOTE CONTROLS - DIGITAL THROTTLE & SHIFT (DTS) UNITS . 9-11	
POWERHEAD RECONDITIONING	6-57	DESCRIPTION & OPERATION	9-11
BEARINGS	6-66	DIGITAL REMOTE UNITS	9-14
GENERAL INFORMATION	6-66	ELECTRONIC SHIFT CONTROL (ESC)	9-12
INSPECTION	6-67	ELECTRONIC THROTTLE CONTROL (ETC)	9-13
BUY OR REBUILD?	6-57	REMOTE CONTROLS - MECHANICAL UNITS	9-2
CONNECTING RODS	6-64	ADDITIONAL REMOTE UNITS	9-6
GENERAL INFORMATION	6-64	COMMANDER SIDE MOUNT REMOTE CONTROL BOX	9-2
INSPECTION	6-65	REMOTE (SHIFT & THROTTLE) CABLES	9-9
CRANKSHAFT	6-65	REMOTE (SHIFT & THROTTLE) CABLES - MECHANICAL	9-9
GENERAL INFORMATION	6-65	INSTALLATION & ADJUSTMENT - TO THE POWERHEAD	9-9
INSPECTION	6-66	RIGGING & MEASUREMENT FOR REPLACEMENT	9-9
CYLINDER BLOCK AND HEAD	6-59	RE-COMMISSIONING	2-78
GENERAL INFORMATION	6-59	REMOVAL FROM STORAGE	2-78
INSPECTION	6-60	SAFETY IN SERVICE	1-12
CYLINDER BORES	6-60	DO'S	1-12
GENERAL INFORMATION	6-60	DON'TS	1-13
INSPECTION	6-60	SHIFT INTERRUPT SWITCH - DFI	3-87
REFINISHING	6-61	DESCRIPTION & OPERATION	3-87
DETERMINING CONDITION	6-57	REMOVAL & INSTALLATION	3-88
OVERHAUL TIPS	6-58	TESTING	3-87
CAUTIONS	6-58	SHIFTING PRINCIPLES	7-2
CLEANING	6-58	COUNTER-ROTATING UNIT	7-3
PISTONS	6-62	STANDARD ROTATING UNIT	7-2
GENERAL INFORMATION	6-62	SHOP EQUIPMENT	1-17
INSPECTION	6-62	CHEMICALS	1-17
PISTON PINS	6-63	SAFETY TOOLS	1-17
GENERAL INFORMATION	6-63	SPARK PLUG WIRES	2-39
INSPECTION	6-63	REMOVAL & INSTALLATION	2-39
PISTON RINGS	6-63	TESTING	2-39
GENERAL INFORMATION	6-63	SPARK PLUGS	2-35
INSPECTION	6-64	HEAT RANGE	2-35
PREPARATION	6-58	INSPECTION & GAPPING	2-38
REED VALVES	6-68	READING PLUGS	2-37
GENERAL INFORMATION	6-68	REMOVAL & INSTALLATION	2-36
INSPECTION	6-68	SPECIFICATIONS	
PROPELLER	2-16	CAPACITIES	2-83
GENERAL INFORMATION	2-16	CARBURETOR SET-UP	3-111
INSPECTION	2-19	CHARGING SYSTEM TESTING	4-39
REMOVAL & INSTALLATION	2-19	CONVERSION FACTORS	1-28
CASTELLATED NUT PROPS	2-20	COOLING SYSTEM	5-44
SHEAR PIN PROPS	2-20	ENGINE REBUILDING	6-70
PTT ASSEMBLY - MID-RANGE MOTOR, SINGLE RAM	8-18	FUEL INJECTION COMPONENT ADJUSTMENT	3-112
OVERHAUL	8-19	GENERAL ENGINE	2-80
REMOVAL & INSTALLATION	8-18	IGNITION	4-36
SYSTEM BLEEDING	8-19	MAINTENANCE INTERVALS	2-82
PTT ASSEMBLY - 3 RAM INTEGRAL	8-27	SPARK PLUG DIAGNOSIS	2-86
REMOVAL & INSTALLATION	8-27	TORQUE	6-74
SYSTEM BLEEDING	8-28	TUNE-UP	2-84
PTT HYDRAULIC CYLINDER	8-13	TYPICAL TORQUE VALUES - METRIC BOLTS	1-29
REMOVAL & INSTALLATION	8-13	TYPICAL TORQUE VALUES - U.S. STANDARD BOLTS	1-30
PTT HYDRAULIC PUMP	8-13	2-STROKE MOTOR FUEL:OIL RATIO	2-83
OVERHAUL	8-14	START BUTTON	4-60
REMOVAL & INSTALLATION	8-13	TESTING	4-60
SYSTEM BLEEDING	8-14		

<p>STARTER CIRCUIT 4-48</p> <p>STARTER MOTOR 4-52</p> <p>STARTER MOTOR CIRCUITS 4-48</p> <p>STARTER RELAY/SOLENOID 4-50</p> <p>STARTER MOTOR 4-52</p> <p>CLEANING & INSPECTION 4-58</p> <p>DESCRIPTION 4-52</p> <p>OVERHAUL 4-54</p> <p>REMOVAL & INSTALLATION 4-52</p> <p>STARTER MOTOR CIRCUITS 4-48</p> <p>DESCRIPTION & OPERATION 4-48</p> <p>TROUBLESHOOTING 4-49</p> <p>STARTER RELAY/SOLENOID 4-50</p> <p>DESCRIPTION & OPERATION 4-50</p> <p>REMOVAL & INSTALLATION 4-52</p> <p>TESTING 4-51</p> <p>STATOR/BATTERY CHARGE COIL (UNDER FLYWHEEL) 4-42</p> <p>DESCRIPTION & OPERATION 4-42</p> <p>TESTING 4-42</p> <p>STATOR/CHARGE COIL 4-22</p> <p>DESCRIPTION & OPERATION 4-22</p> <p>REMOVAL & INSTALLATION 4-23</p> <p>TESTING 4-22</p> <p>STORAGE 2-75</p> <p>RE-COMMISSIONING 2-78</p> <p>WINTERIZATION 2-75</p> <p>TEMPERATURE SENSORS - DFI 3-82</p> <p>DESCRIPTION & OPERATION 3-82</p> <p>REMOVAL & INSTALLATION 3-84</p> <p>TESTING 3-83</p> <p>TEMPERATURE SWITCH (WARNING SYSTEM) 5-38</p> <p>CHECKING CONTINUITY 5-39</p> <p>DESCRIPTION & OPERATION 5-38</p> <p>OPERATIONAL CHECK 5-38</p> <p>TEST EQUIPMENT 4-4</p> <p>JUMPER WIRES 4-4</p> <p>MULTI-METERS 4-5</p> <p>TEST LIGHTS 4-4</p> <p>THERMOSTAT 5-15</p> <p>EXPLODED VIEWS 5-17</p> <p>REMOVAL & INSTALLATION 5-15</p> <p>THROTTLE BODY, AIR PLENUM & REED BLOCK - DFI 3-104</p> <p>REMOVAL & INSTALLATION 3-104</p> <p>THROTTLE POSITION SENSOR (TPS)</p> <p>DFI 3-85</p> <p>DESCRIPTION & OPERATION 3-85</p> <p>REMOVAL & INSTALLATION 3-86</p> <p>TESTING 3-85</p> <p>EFI 3-58</p> <p>DESCRIPTION & OPERATION 3-58</p> <p>REMOVAL & INSTALLATION 3-59</p> <p>TESTING 3-58</p> <p>TILLER HANDLE 9-16</p> <p>CONTROL CABLES 9-20</p> <p>DESCRIPTION & OPERATION 9-16</p> <p>TILLER HANDLE 9-16</p> <p>TROUBLESHOOTING 9-16</p> <p>TILLER HANDLE 9-16</p> <p>REMOVAL & INSTALLATION 9-16</p> <p>TILT ROD - 3 RAM INTEGRAL 8-31</p> <p>REMOVAL & INSTALLATION 8-31</p>	<p>TIMING & SYNCHRONIZATION 2-41</p> <p>2.5/3.3 HP 2-42</p> <p>IDLE SPEED 2-42</p> <p>IGNITION TIMING 2-42</p> <p>THROTTLE JET NEEDLE 2-42</p> <p>4/5 HP 2-43</p> <p>IDLE SPEED & MIXTURE 2-44</p> <p>IGNITION TIMING 2-43</p> <p>6/8 & 9.9/10/15 HP 2-44</p> <p>IDLE SPEED 2-44</p> <p>IDLE WIRE 2-46</p> <p>IGNITION TIMING 2-45</p> <p>LOW SPEED MIXTURE 2-44</p> <p>20/20 JET/25 HP 2-46</p> <p>CARBURETOR & LINKAGE 2-46</p> <p>IDLE SPEED & MIXTURE 2-48</p> <p>IGNITION TIMING 2-47</p> <p>30/40 HP 2-CYLINDER 2-49</p> <p>IDLE SPEED & MIXTURE 2-49</p> <p>IGNITION TIMING 2-50</p> <p>OIL PUMP 2-51</p> <p>REMOTE CONTROL CABLE 2-50</p> <p>40-125 HP CARB 3 & 4-CYL 2-51</p> <p>IDLE SPEED 2-54</p> <p>IGNITION TIMING 2-53</p> <p>CARBURETOR SYNCHRONIZATION 2-51</p> <p>75/90/115 HP OPTIMAX 2-54</p> <p>THROTTLE LINKAGE 2-54</p> <p>150-200 HP (2.5L) V6 CARB 2-55</p> <p>CARBURETOR SYNCHRONIZATION 2-56</p> <p>IDLE SPEED 2-58</p> <p>IGNITION TIMING 2-57</p> <p>IGNITION TIMING POINTER 2-55</p> <p>150-200 HP (2.5L) V6 EFI - 2001 2-58</p> <p>DYNAMIC IDLE TIMING 2-62</p> <p>DYNAMIC MAXIMUM TIMING 2-63</p> <p>IDLE SPEED 2-62</p> <p>MAXIMUM THROTTLE 2-60</p> <p>STATIC IDLE TIMING 2-60</p> <p>STATIC MAXIMUM TIMING 2-60</p> <p>THROTTLE CABLE PRELOAD 2-62</p> <p>THROTTLE CAM 2-59</p> <p>THROTTLE POSITION SENSOR 2-61</p> <p>THROTTLE VALVE & OIL PUMP SYNCHRONIZATION 2-62</p> <p>TIMER POINTER 2-58</p> <p>TRIGGER LINK ROD & PRELIMINARY 2-59</p> <p>150-200 HP (2.5L) V6 EFI - 2002 & LATER 2-63</p> <p>IDLE SPEED 2-64</p> <p>IGNITION TIMING 2-63</p> <p>MAXIMUM THROTTLE 2-64</p> <p>THROTTLE CABLE 2-64</p> <p>THROTTLE CAM 2-63</p> <p>THROTTLE PLATE SCREW 2-65</p> <p>THROTTLE POSITION SENSOR 2-64</p> <p>135-175 HP (2.5L) V6 OPTIMAX 2-65</p> <p>IDLE SPEED 2-66</p> <p>MAXIMUM THROTTLE 2-66</p> <p>THROTTLE CAM 2-66</p> <p>THROTTLE PLATE SCREW 2-66</p> <p>THROTTLE POSITION SENSOR 2-66</p> <p>225-250 HP (3.0L) V6 EFI - 2001 2-67</p> <p>CRANKSHAFT POSITION SENSOR 2-67</p> <p>IDLE SPEED 2-69</p> <p>MAXIMUM THROTTLE 2-68</p> <p>THROTTLE CAM 2-67</p> <p>THROTTLE VALVE & OIL PUMP SYNCHRONIZATION 2-68</p> <p>TIMER POINTER 2-67</p> <p>THROTTLE POSITION SENSOR (TPS) 2-69</p>
--	--

10-22 MASTER INDEX

200-250 HP (3.0L) V6 EFI - 2002 & LATER	2-70	TUNE-UP	2-32
IDLE SPEED	2-71	COMPRESSION TESTING	2-33
IGNITION TIMING	2-70	ELECTRICAL SYSTEM CHECKS	2-40
MAXIMUM THROTTLE	2-70	FUEL SYSTEM CHECKS	2-41
THROTTLE CABLE	2-71	IGNITION SYSTEM	2-39
THROTTLE CAM	2-70	INTRODUCTION	2-32
THROTTLE PLATE SCREW	2-71	SPARK PLUG WIRES	2-39
THROTTLE POSITION SENSOR	2-71	SPARK PLUGS	2-35
200-250 HP (3.0L) V6 OPTIMAX	2-71	TUNE-UP SEQUENCE	2-32
CRANKSHAFT POSITION SENSOR	2-71	TIMING & SYNCHRONIZATION	2-41
IDLE SPEED	2-74		
MAXIMUM THROTTLE	2-72	TUNE-UP SEQUENCE	2-32
THROTTLE CAM	2-72		
THROTTLE PLATE SCREW	2-74		
THROTTLE POSITION SENSOR	2-74		
TOOLS	1-19	UNDERSTANDING & TROUBLESHOOTING ELECTRICAL SYSTEMS	4-2
ELECTRONIC TOOLS	1-23	BASIC ELECTRICAL THEORY	4-2
HAND TOOLS	1-19	ELECTRICAL COMPONENTS	4-2
MEASURING TOOLS	1-25	ELECTRICAL TESTING	4-6
OTHER COMMON TOOLS	1-22	PRECAUTIONS	4-8
SPECIAL TOOLS	1-23	TEST EQUIPMENT	4-4
		TROUBLESHOOTING	4-6
		WIRE & CONNECTOR REPAIR	4-7
TRACKER VALVE - DFI	3-100		
DESCRIPTION & OPERATION	3-100	VAPOR SEPARATOR - DFI	3-101
REMOVAL & INSTALLATION	3-101	DESCRIPTION & OPERATION	3-101
		OVERHAUL	3-102
		REMOVAL & INSTALLATION	3-101
TRIGGER COILS	4-25		
DESCRIPTION & OPERATION	4-25	VAPOR SEPARATOR TANK (VST) ASSEMBLY - EFI	3-66
REMOVAL & INSTALLATION	4-26	DESCRIPTION & OPERATION	3-66
TESTING	4-25	OVERHAUL	3-68
		REMOVAL & INSTALLATION	3-66
TRIM MOTOR & PUMP - 3 RAM INTEGRAL	8-32		
REMOVAL & INSTALLATION	8-33	WARNING SYSTEMS	5-31
TESTING THE MOTOR	8-32	OIL & TEMPERATURE WARNING SYSTEMS	5-31
		OIL LEVEL SENSOR (SWITCH)	5-40
		TEMPERATURE SWITCH (WARNING SYSTEM)	5-38
TRIM ROD & CAP - 3 RAM INTEGRAL	8-28		
REMOVAL & INSTALLATION	8-28	WATER PUMP	5-19
		CLEANING & INSPECTION	5-31
		REMOVAL & INSTALLATION	5-19
TRIM SENDER & GAUGE - 3 RAM INTEGRAL	8-33		
ADJUSTING AN ANALOG SENDER	8-34	WATER SENSOR - EFI	3-60
TESTING THE TRIM SENDER	8-33	DESCRIPTION, OPERATION & TESTING	3-60
TRIM SENDER & GAUGE WIRING	8-34		
		WINTERIZATION	2-75
		PREPPING FOR STORAGE	2-75
		STORAGE CHECKLIST	2-75
TRIM/TILT SYSTEMS			
GAS ASSIST TILT SYSTEM	8-6	WIRE & CONNECTOR REPAIR	4-7
MECHANICAL TILT (UNASSISTED)	8-2		
PTT - SMALL MOTOR, SINGLE RAM INTEGRAL	8-10	WIRING DIAGRAMS	4-61
PTT - MID-RANGE MOTOR, SINGLE RAM INTEGRAL	8-14	INDEX	4-61
PTT - 3 RAM INTEGRAL	8-23		
		ZINCS	2-24
TROUBLESHOOTING		INSPECTION	2-25
BASIC OPERATING PRINCIPLES	1-13	SERVICING	2-25
CARBURETOR	3-15	2-STROKE OIL	2-12
COMMANDER SIDE MOUNT REMOTE	9-2	FILLING	2-12
COOLING SYSTEM	5-12	FUEL:OIL RATIO	2-12
CHARGING CIRCUIT	4-38	OIL INJECTION	2-13
DFI	3-73	OIL RECOMMENDATIONS	2-12
EFI	3-43	PRE-MIX	2-13
ELECTRICAL SYSTEMS	4-6		
HAND REWIND STARTER	10-2		
IGNITION SYSTEMS	4-11		
LOWER UNIT	7-3		
OIL INJECTION SYSTEM	5-2		
PTT - SMALL MOTOR, SINGLE RAM INTEGRAL	8-10		
PTT - MID-RANGE MOTOR, SINGLE RAM INTEGRAL	8-15		
PTT - 3 RAM INTEGRAL	8-23		
TILLER HANDLE	9-16		
WARNING SYSTEM ACTIVATION	5-32		