



Presents

# Repair Manuals from

# SELOC.

## Contents of this manual:

---

<b>1</b>	<b>GENERAL INFORMATION, SAFETY AND TOOLS</b>	HOW TO USE THIS MANUAL	1-2
		BOATING SAFETY	1-4
		BOATING EQUIPMENT (NOT REQUIRED BUT RECOMMENDED)	1-10
		SAFETY IN SERVICE	1-12
		TROUBLESHOOTING	1-13
		SHOP EQUIPMENT	1-16
		TOOLS	1-18
		FASTENERS, MEASUREMENT, AND CONVERSIONS	1-26
		SPECIFICATIONS	1-27
		<hr/>	
<b>2</b>	<b>MAINTENANCE &amp; TUNE-UP</b>	GENERAL INFORMATION	2-2
		LUBRICATION SERVICE	2-4
		ENGINE MAINTENANCE	2-10
		BOAT MAINTENANCE	2-23
		TUNE-UP	2-26
		TIMING AND SYNCHRONIZATION	2-35
		STORAGE (WHAT TO DO BEFORE & AFTER)	2-38
		CLEARING A SUBMERGED MOTOR	2-41
		SPECIFICATIONS	2-42
		<hr/>	
<b>3</b>	<b>FUEL SYSTEM</b>	FUEL SYSTEM BASICS	3-2
		FUEL TANK & LINES	3-4
		PRIMER CHOKE SYSTEM (MANUAL & ELECTRIC)	3-30
		FUEL HOSE ROUTING DIAGRAMS	3-35
		SPECIFICATIONS	3-36
		<hr/>	
<b>4</b>	<b>IGNITION &amp; ELECTRICAL SYSTEMS</b>	UNDERSTANDING AND TROUBLESHOOTING	
		ELECTRICAL SYSTEMS	4-2
		IGNITION SYSTEMS	4-8
		TYPE I - CAPACITOR DISCHARGE (CD) FLYWHEEL MAGNETO SYSTEMS	4-12
		TYPE II - CAPACITOR DISCHARGE (CD) FLYWHEEL MAGNETO SYSTEMS	4-22
		TYPE III - CAPACITOR DISCHARGE IGNITION SYSTEMS	4-30
		CHARGING SYSTEM	4-45
		STARTING SYSTEM	4-51
		SPECIFICATIONS	4-62
		WIRING DIAGRAMS	4-62

# CONTENTS

VARIABLE RATIO OILING (VRO & VRO2) SYSTEM 5-2  
COOLING SYSTEM 5-13

## COOLING SYSTEMS

# 5

POWERHEAD DISASSEMBLY 6-4  
POWERHEAD ASSEMBLY 6-20  
POWERHEAD BREAK-IN 6-26  
EXPLODED VIEWS 6-27  
SPECIFICATIONS 6-29

## POWERHEAD

# 6

GEARCASE BASICS 7-2  
LOWER UNIT - ELECTRIC SHIFT 7-7  
LOWER UNIT - MECHANICAL SHIFT & HYDRAULIC ASSIST 7-22  
LOWER UNIT - MECHANICAL SHIFT & SLIDING CLUTCH DOG 7-34  
JET DRIVE 7-45  
SPECIFICATIONS 7-57

## LOWER UNIT

# 7

TRIM/TILT SYSTEMS 8-2

## TRIM & TILT

# 8

SINGLE LEVER HYDRO-ELECTRIC REMOTE CONTROL SHIFT BOX 9-2  
CONTROL UNIT - SINGLE LEVER HYDRO-ELECTRIC 9-3  
SINGLE LEVER REMOTE CONTROL SHIFT BOX 9-6  
LATE-MODEL MECHANICAL SHIFT REMOTE CONTROLS 9-11  
CONTROL CABLES 9-22

## HAND REWIND STARTERS

# 9

MASTER INDEX 9-23

## MASTER INDEX

ANCHORS .....	1-10	CARBURETOR - TYPE IV .....	3-21
ANODES .....	2-21	CLEANING & INSPECTION .....	3-25
INSPECTION .....	2-21	DISASSEMBLY & ASSEMBLY .....	3-23
SERVICE .....	2-21	MIXTURE ADJUSTMENT - 1988-91 MODELS .....	3-27
AVOIDING COMMON MISTAKES .....	1-3	REMOVAL & INSTALLATION .....	3-22
AVOIDING TROUBLE .....	1-2	CARBURETORS - GENERAL INFORMATION .....	3-13
BAILING DEVICES .....	1-10	CENTERING PIN .....	6-10
BASIC ELECTRICAL THEORY .....	4-2	REMOVAL .....	6-10
HOW DOES ELECTRICITY WORK: THE WATER ANALOGY .....	4-2	CHARGING SYSTEM .....	4-45
OHM'S LAW .....	4-2	BATTERY .....	4-49
BASIC OPERATING PRINCIPLES .....	1-13	DESCRIPTION .....	4-45
2-STROKE MOTORS .....	1-13	OPERATION .....	4-46
4-STROKE MOTORS .....	1-15	TROUBLESHOOTING .....	4-46
COMBUSTION .....	1-16	CHEMICALS .....	1-17
BATTERY .....		CLEANERS .....	1-18
BATTERY SELECTOR SWITCH .....	4-51	LUBRICANTS & PENETRANTS .....	1-17
CONSTRUCTION .....	4-49	SEALANTS .....	1-17
DUAL BATTERY INSTALLATION .....	4-50	CHOKE CIRCUIT .....	4-61
JUMPER CABLES .....	4-50	CLEARING A SUBMERGED MOTOR .....	2-41
LOCATION .....	4-50	COIL POLARITY CHECK .....	4-9
MAINTENANCE .....	2-23	COMPASS .....	1-10
MARINE .....	4-49	INSTALLATION .....	1-11
RATINGS .....	4-49	PRECAUTIONS .....	1-11
SERVICE .....	4-50	SELECTION .....	1-10
STORAGE .....	2-25, 4-50	COMPRESSION CHECK .....	2-27
TESTING .....	2-24	TUNE-UP COMPRESSION CHECK .....	2-27
BEFORE/AFTER EACH USE .....	2-3	CONCEALED SIDE MOUNT REMOTE UNITS -	
VISUALLY INSPECTING THE BOAT & MOTOR .....	2-3	LATE-MODEL MECHANICAL SHIFT .....	9-18
BOAT MAINTENANCE .....	2-23	DISASSEMBLING THE HOUSING .....	9-19
BATTERIES .....	2-23	REPLACING THE TRIM/TILT SWITCH .....	9-18
FIBERGLASS HULL .....	2-25	CONNECTING ROD & PISTON .....	6-11
BOATING EQUIPMENT (NOT REQUIRED BUT RECOMMENDED) .....	1-10	ASSEMBLY .....	6-15
ANCHORS .....	1-10	CLEANING & INSPECTION - PISTON & RING .....	6-14
BAILING DEVICES .....	1-10	DISASSEMBLY .....	6-12
COMPASS .....	1-10	INSPECTION & SERVICE - CONNECTING ROD .....	6-13
FIRST AID KIT .....	1-10	INSTALLATION .....	6-20
OAR/PADDLE .....	1-10	REMOVAL .....	6-11
TOOLS & SPARE PARTS .....	1-12	CONTROL CABLES .....	9-22
VHF-FM RADIO .....	1-10	RIGGING .....	9-22
BOATING SAFETY .....	1-4	CONTROL UNIT - SINGLE LEVER HYDRO-ELECTRIC .....	9-3
COURTESY MARINE EXAMINATIONS .....	1-10	ASSEMBLY .....	9-6
REGULATIONS FOR YOUR BOAT .....	1-4	CLEANING & INSPECTION .....	9-4
REQUIRED SAFETY EQUIPMENT .....	1-5	DISASSEMBLY .....	9-3
BOLTS, NUTS & OTHER THREADED RETAINERS .....	1-26	COOLING SYSTEM .....	
BOTTOM SEAL .....	6-9	DESCRIPTION & OPERATION .....	5-14
REMOVAL .....	6-9	FLUSHING THE SYSTEM .....	2-10
BREAKING IN A POWERHEAD .....	6-26	THERMOSTAT (AND PRESSURE RELIEF VALVE) .....	5-17
BREAK-IN AND THE VRO SYSTEM .....	5-2	TROUBLESHOOTING .....	5-14
BYPASS COVER .....	6-7	WATER FLOW DIAGRAMS .....	5-22
INSTALLATION .....	6-25	WATER PUMP .....	5-18
REMOVAL .....	6-7	COOLING SYSTEM MAINTENANCE .....	2-34
CAN YOU DO IT? .....	1-2	WATER PUMP CHECK .....	2-34
CARBURETED FUEL SYSTEMS .....	3-9	COURTESY MARINE EXAMINATIONS .....	1-10
CARBURETOR APPLICATIONS .....	3-14	CRANKCASE COVER .....	6-10
DESCRIPTION & OPERATION .....	3-9	INSTALLATION .....	6-23
FUEL PUMP .....	3-27	REMOVAL .....	6-10
GENERAL INFORMATION .....	3-13	CRANKSHAFT & BEARING .....	6-17
TROUBLESHOOTING .....	3-11	ASSEMBLY .....	6-18
TYPE I CARBURETOR .....	3-14	CLEANING & INSPECTION .....	6-18
TYPE II & III CARBURETORS .....	3-18	INSTALLATION .....	6-22
TYPE IV CARBURETOR .....	3-21	REMOVAL & DISASSEMBLY .....	6-17
CARBURETOR APPLICATIONS .....	3-14	CYLINDER BLOCK .....	6-18
CARBURETOR - TYPE I .....	3-14	SERVICE .....	6-18
CLEANING & INSPECTION .....	3-16	CYLINDER HEAD .....	6-4
DISASSEMBLY & ASSEMBLY .....	3-15	INSTALLATION .....	6-25
REMOVAL & INSTALLATION .....	3-14	REMOVAL .....	6-4
CARBURETOR - TYPE II & III .....	3-18		
CLEANING & INSPECTION .....	3-21		
DISASSEMBLY & ASSEMBLY .....	3-19		
REMOVAL & INSTALLATION .....	3-18		

## 9-24 MASTER INDEX

DE-CARBONING THE PISTONS .....	2-27	ENGINE MAINTENANCE .....	2-10
DESCRIPTION & OPERATION		ANODES (ZINCS) .....	2-21
AIR/FUEL MIXTURE .....	3-10	COOLING SYSTEM .....	2-10
CHARGING SYSTEM .....	4-45	ENGINE COVERS .....	2-10
CONVENTIONAL LARGE MOTOR SYSTEM .....	8-4	FUEL FILTER .....	2-15
COOLING SYSTEM .....	5-14	JET DRIVE IMPELLER .....	2-19
FASTRAK® SYSTEM .....	8-3	LOWER UNIT (GEARCASE) OIL .....	2-13
FLOAT SYSTEMS .....	3-9	POWER STEERING BELT .....	2-22
FUEL SYSTEM .....	3-11	PROPELLER .....	2-17
JET DRIVE .....	7-45	2-STROKE ENGINE OIL .....	2-12
LOWER UNIT - ELECTRIC SHIFT .....	7-7	EXHAUST COVER .....	6-7
LOWER UNIT - MECHANICAL SHIFT & HYDRAULIC ASSIST .....	7-22	CLEANING .....	6-8
LOWER UNIT - MECHANICAL SHIFT & SLIDING CLUTCH DOG .....	7-34	INSTALLATION .....	6-25
MANUALLY TILTING A FASTRAK® ENGINE .....	8-4	REMOVAL .....	6-7
REMOTE CONTROL - EARLY MODEL SINGLE LEVER SHIFT BOX .....	9-7	EXHAUST & BYPASS COVER .....	6-25
REMOTE CONTROL - LATE-MODEL MECHANICAL SHIFT .....	9-12	INSTALLATION .....	6-25
SINGLE-RAM SYSTEM (SOME V4 MODELS PRIOR TO 1978) .....	8-9	EXPLODED VIEWS .....	6-27
STARTING SYSTEM .....	4-51	TYPICAL 3-CYLINDER POWERHEAD .....	6-27
THE ROLE OF A CARBURETOR .....	3-9	TYPICAL V4 POWERHEAD .....	6-27
TYPE I CD FLYWHEEL MAGNETO .....	4-12	TYPICAL V6 CRANKSHAFT .....	6-28
TYPE II CD FLYWHEEL MAGNETO .....	4-22	TYPICAL V6 POWERHEAD .....	6-28
TYPE III CD .....	4-30	FASTENERS, MEASUREMENTS & CONVERSIONS .....	1-26
VRO/VRO2 SYSTEM .....	5-2	BOLTS, NUTS & OTHER THREADED RETAINERS .....	1-26
DIRECTIONS & LOCATIONS .....	1-2	STANDARD & METRIC MEASUREMENTS .....	1-27
ELECTRIC FUEL PRIMER .....	3-31	TORQUE .....	1-27
DISASSEMBLY & ASSEMBLY .....	3-33	FIBERGLASS HULL .....	2-25
REMOVAL & INSTALLATION .....	3-33	INSPECTION & CARE .....	2-25
TESTING .....	3-32	FIRE EXTINGUISHERS .....	1-5
ELECTRIC STARTER MOTOR PINION .....	2-5	CARE & TREATMENT .....	1-6
LUBRICATION .....	2-5	CONTENTS OF EXTINGUISHERS .....	1-6
RECOMMENDED LUBRICANT .....	2-5	EXTINGUISHER APPROVAL .....	1-6
ELECTRICAL ACCESSORIES .....	4-59	HALON EXTINGUISHERS .....	1-6
CHOKE CIRCUIT .....	4-61	LEGAL REQUIREMENTS .....	1-6
FUEL GAUGE .....	4-60	USING A EXTINGUISHER .....	1-6
HORNS .....	4-61	FIRST AID KIT .....	1-10
TACHOMETER .....	4-61	FUEL .....	3-2
TEMPERATURE GAUGE AND/OR WARNING LIGHT .....	4-59	ALCOHOL-BLENDED FUELS .....	3-3
ELECTRICAL COMPONENTS .....	4-2	CHECKING FOR STALE/CONTAMINATED FUEL .....	3-3
GROUND .....	4-3	HIGH ALTITUDE OPERATION .....	3-3
LOAD .....	4-4	OCTANE RATING .....	3-2
POWER SOURCE .....	4-2	RECOMMENDATIONS .....	3-3
PROTECTIVE DEVICES .....	4-3	VAPOR PRESSURE .....	3-3
SWITCHES & RELAYS .....	4-4	FUEL FILTER .....	2-15
WIRING & HARNESSSES .....	4-4	FUEL PUMP FILTERS (NON-VRO) .....	2-15
ELECTRICAL SYSTEM PRECAUTIONS .....	4-8	INLINE FILTERS .....	2-16
ELECTRICAL TESTING .....	4-6	FUEL GAUGE .....	4-60
OPEN CIRCUITS .....	4-7	HOOK-UP .....	4-60
RESISTANCE .....	4-6	TROUBLESHOOTING .....	4-60
SHORT CIRCUITS .....	4-7	FUEL HOSE ROUTING DIAGRAMS .....	3-35
VOLTAGE .....	4-6	V4 W/PRIMER CHOKE	
VOLTAGE DROP .....	4-6	V6 W/PRIMER CHOKE	
ELECTRONIC TOOLS .....	1-23	FUEL LINES & FITTINGS .....	3-7
BATTERY CHARGERS .....	1-23	SERVICE .....	3-8
BATTERY TESTERS .....	1-23	TESTING .....	3-7
GAUGES .....	1-24	CHECKING FUEL FLOW AT MOTOR .....	3-7
MULTI-METERS (DVOMS) .....	1-24	CHECKING THE PRIMER BULB .....	3-7
ENGINE COVER LATCHES .....	2-5	FUEL LINE QUICK CHECK .....	3-7
LUBRICATION .....	2-5	FUEL PRIMER	
RECOMMENDED LUBRICANT .....	2-5	ELECTRIC .....	3-31
ENGINE COVERS .....	2-10	MANUAL .....	3-30
REMOVAL & INSTALLATION .....	2-10	FUEL PUMP .....	3-27
ENGINE IDENTIFICATION .....	2-2	OVERHAUL .....	3-29
ABOUT JOHNSON/EVINRUDE MODELS .....	2-2	REMOVAL & INSTALLATION .....	3-28
ENGINE SERIAL NUMBERS .....	2-3	TESTING .....	3-28
DECIPHERING THE MODEL CODE ON 1973-79 ENGINES .....	2-3	PUMP LEAK TEST .....	3-28
DECIPHERING THE MODEL CODE ON 1980 & LATER ENGINES .....	2-3	PUMP PRESSURE TEST .....	3-28

FUEL SYSTEM BASICS .....	3-2	JET DRIVE .....	7-45
FUEL .....	3-2	ADJUSTMENTS .....	7-53
FUEL SYSTEM PRESSURIZATION .....	3-4	DESCRIPTION & OPERATION .....	7-45
SERVICE CAUTIONS .....	3-2	IMPELLER .....	7-46
FUEL SYSTEM MAINTENANCE .....	2-34	JET DRIVE ASSEMBLY .....	7-47
CARBURETOR ADJUSTMENTS .....	2-34	REVERSE GATE (LATE MODELS) .....	7-54
FUEL & FUEL TANKS .....	2-34	JET DRIVE ADJUSTMENTS .....	7-53
FUEL PUMPS .....	2-34	CABLE ALIGNMENT & FREE PLAY .....	7-53
FUEL SYSTEM PRESSURIZATION .....	3-4	NEUTRAL STOP .....	7-54
PRESSURIZING THE FUEL SYSTEM .....	3-4	TRIM .....	7-54
FUEL TANK .....	3-5	JET DRIVE ASSEMBLY .....	7-47
SERVICE .....	3-5	ASSEMBLY .....	7-52
ANTI-SIPHON VALVE .....	3-6	CLEANING & INSPECTION .....	7-51
BOAT MOUNTED FUEL TANKS .....	3-6	DISASSEMBLY .....	7-48
PORTABLE FUEL TANKS .....	3-5	REMOVAL & INSTALLATION .....	7-47
FUEL TANK & LINES .....	3-4	JET DRIVE BEARING .....	2-6
FUEL TANK .....	3-5	DAILY BEARING LUBRICATION .....	2-6
FUEL LINES & FITTINGS .....	3-7	GREASE REPLACEMENT .....	2-6
GEARCASE BASICS .....	7-2	RECOMMENDED LUBRICANT .....	2-6
GEARCASE DIFFERENCES .....	7-2	JET DRIVE IMPELLER .....	2-19
GEARCASE MAINTENANCE & SERVICE .....	7-2	CHECKING CLEARANCE .....	2-20
LOWER UNIT (GEARCASE) OIL .....	7-5	INSPECTION .....	2-20
PROPELLER .....	7-3	LINKAGE, CABLES & SHAFTS .....	2-8
GEARCASE DIFFERENCES .....	7-2	LUBRICATION .....	2-8
DESCRIPTION .....	7-2	RECOMMENDED LUBRICANT .....	2-8
LOWER UNIT COVERAGE .....	7-2	LOWER UNIT .....	
GEARCASE MAINTENANCE & SERVICE .....	7-2	ELECTRIC SHIFT .....	7-7
GEARCASE OIL .....	2-13, 7-5	MECHANICAL SHIFT & HYDRAULIC ASSIST .....	7-22
CHECKING LEVEL & CONDITION .....	2-14, 7-5	MECHANICAL SHIFT & SLIDING CLUTCH DOG .....	7-34
DRAINING & FILLING .....	7-7	LOWER UNIT OIL .....	2-13
RECOMMENDATIONS .....	2-14, 7-5	CHECKING OIL LEVEL & CONDITION .....	2-14
GENERAL INFORMATION .....	2-2	DRAINING & FILLING .....	2-15
BEFORE/AFTER EACH USE .....	2-3	OIL RECOMMENDATIONS .....	2-14
ENGINE IDENTIFICATION .....	2-2	LOWER UNIT - ELECTRIC SHIFT .....	7-7
MAINTENANCE COVERAGE .....	2-2	BEARING CARRIER, BEARINGS & SEALS .....	7-14
MAINTENANCE EQUALS SAFETY .....	2-2	CLEANING & INSPECTION .....	7-22
OUTBOARDS ON SAIL BOATS .....	2-2	DESCRIPTION & OPERATION .....	7-7
HAND TOOLS .....	1-19	DRIVESHAFT & PINION GEAR .....	7-18
BREAKER BARS .....	1-20	HYDRAULIC PUMP .....	7-19
HAMMERS .....	1-22	LOWER DRIVESHAFT BEARING .....	7-21
PLIERS .....	1-21	LOWER UNIT (ELECTRIC SHIFT) .....	7-8
SCREWDRIVERS .....	1-21	PROPELLER SHAFT .....	7-15
SOCKET SETS .....	1-19	SHIFT CABLE, SOLENOIDS & ROD .....	7-13
TORQUE WRENCHES .....	1-20	TROUBLESHOOTING (ELECTRIC SHIFT) .....	7-7
WRENCHES .....	1-21	WATER PUMP .....	7-10
HORNS .....	4-61	LOWER UNIT - MECHANICAL SHIFT & HYDRAULIC ASSIST .....	7-22
HOW TO USE THIS MANUAL .....	1-2	ASSIST CYLINDER .....	7-27
AVOIDING COMMON MISTAKES .....	1-3	BEARING CARRIER, BEARINGS & SEALS .....	7-28
AVOIDING TROUBLE .....	1-2	DESCRIPTION & OPERATION .....	7-22
CAN YOU DO IT? .....	1-2	DRIVESHAFT & PINION GEAR .....	7-30
DIRECTIONS & LOCATIONS .....	1-2	EXPLODED VIEWS .....	7-23
MAINTENANCE OR REPAIR? .....	1-2	HYDRAULIC PUMP .....	7-32
PROFESSIONAL HELP .....	1-3	LOWER DRIVESHAFT BEARING .....	7-33
PURCHASING PARTS .....	1-3	LOWER UNIT .....	7-23
WHERE TO BEGIN .....	1-2	PROPELLER SHAFT .....	7-28
IDENTIFICATION .....		REVERSE GEAR .....	7-33
TYPE I CD FLYWHEEL MAGNETO .....	4-12	TROUBLESHOOTING .....	7-22
TYPE II CD FLYWHEEL MAGNETO .....	4-22	WATER PUMP .....	7-25
TYPE III CD .....	4-30	LOWER UNIT - MECHANICAL SHIFT & SLIDING CLUTCH DOG .....	7-34
IGNITION & ELECTRICAL SYSTEM MAINTENANCE .....	2-33	BEARING CARRIER .....	7-38
INSPECTION .....	2-33	DESCRIPTION & OPERATION .....	7-34
IGNITION SYSTEMS .....	4-8	DRIVESHAFT .....	7-40
COIL POLARITY CHECK .....	4-9	LOWER DRIVESHAFT BEARING .....	7-43
IGNITION WIRING HARNESS .....	4-9	LOWER UNIT .....	7-35
INTRODUCTION & IDENTIFICATION .....	4-8	PINION GEAR .....	7-39
SPARK PLUG EVALUATION .....	4-8	PROPELLER SHAFT .....	7-40
TROUBLESHOOTING .....	4-10	PROPELLER SHAFT & DRIVESHAFT .....	7-42
IGNITION WIRING HARNESS .....	4-9	REVERSE GEAR .....	7-44
IMPELLER - JET DRIVE .....	7-46	SHIFT ROD .....	7-43
REMOVAL, SHIMMING & INSTALLATION .....	7-46	TROUBLESHOOTING .....	7-35
		WATER PUMP .....	7-37

## 9-26 MASTER INDEX

LOWER UNIT OIL .....	7-5	MAIN BEARING BOLT & CRANKCASE SIDE BOLT .....	6-10
CHECKING LEVEL & CONDITION .....	7-5	PRELIMINARY WORK .....	6-4
DRAINING & FILLING .....	7-7	REED VALVES .....	6-5
RECOMMENDATIONS .....	7-5	TOP SEAL .....	6-9
LUBRICATION SERVICE .....	2-4	POWER STEERING BELT .....	2-22
ELECTRIC STARTER MOTOR PINION .....	2-5	INSPECTOR .....	2-22
ENGINE COVER LATCHES .....	2-5	REMOVAL & INSTALLATION .....	2-22
JET DRIVE BEARING .....	2-6	POWER STEERING FLUID RESERVOIR .....	2-7
LINKAGE, CABLES & SHAFTS .....	2-8	CHANGING FLUID & FILTER .....	2-8
POWER STEERING FLUID RESERVOIR .....	2-7	CHECKING FLUID LEVEL/CONDITION .....	2-7
POWER TRIM/TILT RESERVOIR .....	2-6	RECOMMENDED LUBRICANT .....	2-7
STEERING ARM .....	2-8	POWER TRIM/TILT RESERVOIR .....	2-6
SWIVEL BRACKET & TILT SUPPORT .....	2-8	CHECKING FLUID LEVEL/CONDITION .....	2-6
TILT TUBE ASSEMBLY .....	2-9	RECOMMENDED LUBRICANT .....	2-6
MAIN BEARING BOLT & CRANKCASE SIDE BOLT .....	6-10	PRELIMINARY WORK .....	6-4
INSTALLATION .....	6-24	PRIMER CHOKE SYSTEM (MANUAL & ELECTRIC) .....	3-30
REMOVAL .....	6-10	MANUAL FUEL PRIMER .....	3-30
MAINTENANCE COVERAGE .....	2-2	ELECTRIC FUEL PRIMER .....	3-31
MAINTENANCE EQUALS SAFETY .....	2-2	PROFESSIONAL HELP .....	1-3
MAINTENANCE OR REPAIR? .....	1-2	PROPELLER	
MANUAL FUEL PRIMER .....	3-30	FROZEN PROPELLER .....	7-4
ASSEMBLY & INSTALLATION .....	3-31	INSPECTION .....	2-18, 7-3
CLEANING & INSPECTION .....	3-31	REMOVAL & INSTALLATION .....	2-18, 7-4
REMOVAL & DISASSEMBLY .....	3-30	PURCHASING PARTS .....	1-3
TESTING .....	3-30	RE-COMMISSIONING .....	2-40
MEASURING TOOLS .....	1-25	REMOVAL FROM STORAGE .....	2-40
DEPTH GAUGES .....	1-26	REBUILDING TIPS .....	6-4
DIAL INDICATORS .....	1-25	CLEANLINESS .....	6-4
MICROMETERS & CALIPERS .....	1-25	POWER HEAD COMPONENTS .....	6-4
TELESCOPING GAUGES .....	1-26	REED INSTALLATION .....	6-4
OAR/PADDLE .....	1-10	TORQUE VALUES .....	6-4
OTHER COMMON TOOLS .....	1-22	REED VALVES .....	6-5
OUTBOARDS ON SAIL BOATS .....	2-2	ASSEMBLING THE REEDS .....	6-7
PERSONAL FLOTATION DEVICES .....	1-7	CLEANING & SERVICING .....	6-6
CARE OF LIFE JACKETS .....	1-8	DESCRIPTION .....	6-5
GENERAL CONSIDERATIONS .....	1-8	INSTALLATION .....	6-25
LEGAL REQUIREMENTS .....	1-8	REGULATIONS FOR YOUR BOAT .....	1-4
PISTON & ROD ASSEMBLY .....	6-20	CAPACITY INFORMATION .....	1-4
INSTALLATION .....	6-20	CERTIFICATE OF COMPLIANCE .....	1-4
POWERHEAD		DOCUMENTING OF VESSELS .....	1-4
ASSEMBLY .....	6-20	HULL IDENTIFICATION NUMBER .....	1-4
BREAK-IN .....	6-26	LENGTH OF BOATS .....	1-4
DISASSEMBLY .....	6-4	NUMBERING OF VESSELS .....	1-4
EXPLODED VIEWS .....	6-27	REGISTRATION OF BOATS .....	1-4
REBUILDING TIPS .....	6-4	SALES & TRANSFERS .....	1-4
SECTION ORGANIZATION .....	6-4	VENTILATION .....	1-4
SPECIFICATIONS .....	6-29	REMOTE CONTROLS -	
THEORY OF OPERATION .....	6-2	SINGLE LEVER HYDRO-ELECTRIC SHIFT BOX .....	9-2
POWERHEAD ASSEMBLY .....	6-20	CONTROL UNIT .....	9-3
CRANKCASE COVER .....	6-23	TROUBLESHOOTING .....	9-2
CRANKSHAFT, NEEDLE, MAIN & ROD BEARING .....	6-22	REMOTE CONTROLS - SINGLE LEVER SHIFT BOX .....	9-6
CYLINDER HEAD .....	6-25	DESCRIPTION & OPERATION .....	9-7
EXHAUST & BYPASS COVER .....	6-25	THROTTLE & SHIFT CONTROL CABLES .....	9-8
MAIN BEARING BOLT & CRANKCASE SIDE BOLT .....	6-24	TROUBLESHOOTING .....	9-7
PISTON & ROD ASSEMBLY .....	6-20	REMOTE CONTROLS - LATE-MODEL MECHANICAL SHIFT .....	9-11
REED BOX .....	6-25	CONCEALED SIDE MOUNT REMOTE UNITS .....	9-18
POWERHEAD BREAK-IN .....	6-26	DESCRIPTION & OPERATION .....	9-12
BREAKING IN A POWERHEAD .....	6-26	PRE-WIRED BINNACLE MOUNT REMOTE UNITS .....	9-19
GENERAL INFORMATION .....	6-26	STANDARD SURFACE MOUNT REMOTE UNITS .....	9-13
POWERHEAD DISASSEMBLY .....	6-4	REMOTE CONTROLS - SMALL MOTOR STANDARD	
BOTTOM SEAL .....	6-9	SURFACE REMOTE UNITS - LATE-MODEL MECHANICAL SHIFT .....	9-15
BYPASS COVER .....	6-7	OVERHAUL .....	9-15
CENTERING PIN .....	6-10	REMOTE CONTROLS - PRE-WIRED BINNACLE MOUNT	
CONNECTING ROD & PISTON .....	6-11	REMOTE UNITS - LATE-MODEL MECHANICAL SHIFT .....	9-19
CRANKCASE COVER .....	6-10	OVERHAUL .....	9-19
CRANKSHAFT & BEARING .....	6-17	REMOTE CONTROLS - STANDARD SURFACE MOUNT	
CYLINDER BLOCK .....	6-18	REMOTE UNITS - LATE-MODEL MECHANICAL SHIFT .....	9-13
CYLINDER HEAD SERVICE .....	6-4	OVERHAUL .....	9-13
EXHAUST COVER .....	6-7		

REQUIRED SAFETY EQUIPMENT.....	1-5	SWIVEL BRACKET & TILT SUPPORT.....	2-8
FIRE EXTINGUISHERS.....	1-5	LUBRICATION.....	2-9
PERSONAL FLOTATION DEVICES.....	1-7	RECOMMENDED LUBRICANT.....	2-8
SOUND PRODUCING DEVICES.....	1-8	TACHOMETER.....	4-61
TYPES OF FIRES.....	1-5	TEMPERATURE GAUGE AND/OR WARNING LIGHT.....	4-59
VISUAL DISTRESS SIGNALS.....	1-8	CHECKING TEMPERATURE GAUGES.....	4-59
WARNING SYSTEM.....	1-6	THERMOMELT STICKS.....	4-59
REVERSE GATE (LATE MODELS).....	7-54	WARNING LIGHTS.....	4-59
GATE ADJUSTMENT.....	7-55	TEST EQUIPMENT.....	4-4
REMOTE CABLE ADJUSTMENT.....	7-55	JUMPER WIRES.....	4-4
TILLER SHIFT ROD ADJUSTMENT.....	7-55	MULTI-METERS.....	4-5
TRIM ADJUSTMENT.....	7-56	TEST LIGHTS.....	4-5
WHICH GATE, EARLY OR LATE?.....	7-54	THEORY OF OPERATION.....	6-2
SAFETY IN SERVICE.....	1-12	ACTUAL OPERATION.....	6-3
DO'S.....	1-12	INTAKE/EXHAUST.....	6-2
DON'TS.....	1-12	LUBRICATION.....	6-3
SAFETY TOOLS.....	1-16	PHYSICAL LAWS.....	6-3
EYE & EAR PROTECTION.....	1-16	POWER STROKE.....	6-3
WORK CLOTHES.....	1-17	SUMMARY.....	6-4
WORK GLOVES.....	1-16	THERMOSTAT (AND PRESSURE RELIEF VALVE).....	5-17
SHIFT BOX - EARLY MODEL SINGLE LEVER.....	9-10	REMOVAL & INSTALLATION.....	5-17
CLEANING & INSPECTION.....	9-11	THROTTLE & SHIFT CONTROL CABLES -	
DISASSEMBLY & ASSEMBLY.....	9-10	EARLY MODEL SINGLE LEVER.....	9-8
SHOP EQUIPMENT.....	1-16	INSTALLATION.....	9-8
CHEMICALS.....	1-17	REMOVAL.....	9-8
SAFETY TOOLS.....	1-16	THROTTLE CABLE LUBRICATION.....	9-10
SPARK PLUG EVALUATION.....	4-8	TILT TUBE ASSEMBLY.....	2-9
SPARK PLUG WIRES.....	2-32	LUBRICATION.....	2-9
REMOVAL & INSTALLATION.....	2-33	RECOMMENDED LUBRICANT.....	2-9
TESTING.....	2-32	TIMING & SYNCHRONIZATION.....	2-35
SPARK PLUGS.....	2-29	TIMING POINTER ADJUSTMENT.....	2-35
HEAT RANGE.....	2-29	3-CYLINDER POWERHEADS.....	2-35
INSPECTION & GAPPING.....	2-32	1973-85 V4 & V6 POWERHEADS.....	2-36
READING PLUGS.....	2-31	1986-91 V4 & V6 POWERHEADS.....	2-37
REMOVAL & INSTALLATION.....	2-29	TIMING POINTER ADJUSTMENT.....	2-35
SPECIAL TOOLS.....	1-23	TOOLS.....	1-18
SPECIFICATIONS.....	4-62	ELECTRONIC TOOLS.....	1-23
BOLT TORQUE - TYPICAL METRIC BOLT TORQUE VALUES.....	1-28	HAND TOOLS.....	1-19
BOLT TORQUE -		MEASURING TOOLS.....	1-25
TYPICAL U.S. STANDARD BOLT TORQUE VALUES.....	1-28	OTHER COMMON TOOLS.....	1-22
CAPACITIES.....	2-45	SPECIAL TOOLS.....	1-23
CONVERSION FACTORS.....	1-27	TOOLS & SPARE PARTS.....	1-12
GEAR OIL CAPACITIES.....	7-58	TOP SEAL.....	6-9
GENERAL ENGINE & TUNE-UP.....	2-42	ASSEMBLY.....	6-9
GENERAL ENGINE & TUNE-UP.....	3-36	REMOVAL.....	6-9
JET DRIVE.....	7-58	TORQUE.....	1-27
OIL/FUEL MIXTURE RATIOS.....	2-45	TRIM/TILT ASSEMBLY	
POWERHEAD.....	6-29	CONVENTIONAL SYSTEMS.....	8-20
SPARK PLUG DIAGNOSIS.....	2-46	FASTRAK® SYSTEMS.....	8-26
TORQUE.....	4-62	SINGLE RAM MODELS (SOME V4 UNITS PRIOR TO 1978).....	8-32
TORQUE.....	6-30	TRIM/TILT MOTOR - CONVENTIONAL SYSTEMS.....	8-25
STANDARD & METRIC MEASUREMENTS.....	1-27	CLEANING & INSPECTION.....	8-25
STARTER MOTOR.....	4-53	DISASSEMBLY & ASSEMBLY.....	8-25
ARMATURE TESTING.....	4-57	REMOVAL & INSTALLATION.....	8-25
CLEANING & INSPECTION.....	4-59	TESTING.....	8-25
DISASSEMBLY & ASSEMBLY.....	4-54	TRIM/TILT SYSTEMS.....	8-2
DRIVE GEAR REPLACEMENT.....	4-53	DESCRIPTION & OPERATION.....	8-3
REMOVAL & INSTALLATION.....	4-53	INTRODUCTION.....	8-2
TESTING.....	4-53	SYSTEM IDENTIFICATION.....	8-2
STARTING SYSTEM.....	4-51	TRIM/TILT ASSEMBLY - CONVENTIONAL SYSTEMS.....	8-20
DESCRIPTION & OPERATION.....	4-51	TRIM/TILT ASSEMBLY - FASTRAK® SYSTEMS.....	8-26
STARTER MOTOR.....	4-53	TRIM/TILT ASSEMBLY - SINGLE RAM MODELS	
TROUBLESHOOTING.....	4-51	(SOME V4 UNITS PRIOR TO 1978).....	8-32
STEERING ARM.....	2-8	TRIM/TILT MOTOR - CONVENTIONAL SYSTEMS.....	8-25
LUBRICATION.....	2-8	TROUBLESHOOTING - MECHANICAL (MODELS THRU 1984).....	8-9
RECOMMENDED LUBRICANT.....	2-8	TROUBLESHOOTING - WITH EQUIPMENT (MODELS THRU 1984).....	8-11
STORAGE (WHAT TO DO BEFORE & AFTER).....	2-38	TROUBLESHOOTING - ELECTRICAL (MODELS THRU 1984).....	8-12
RE-COMMISSIONING.....	2-40	TROUBLESHOOTING (1985-91 MODELS).....	8-15
WINTERIZATION.....	2-38		

## 9-28 MASTER INDEX

<b>TROUBLESHOOTING</b>		<b>UNDERSTANDING &amp; TROUBLESHOOTING ELECTRICAL SYSTEMS</b>	4-2
BASIC OPERATING PRINCIPLES	1-13	BASIC ELECTRICAL THEORY	4-2
CHARGING SYSTEM	4-46	ELECTRICAL COMPONENTS	4-2
COOLING SYSTEM	5-14	ELECTRICAL TESTING	4-6
ELECTRICAL SYSTEMS	4-6	PRECAUTIONS	4-8
FUEL SYSTEM	3-11	TEST EQUIPMENT	4-4
IGNITION SYSTEM - GENERAL	4-10	TROUBLESHOOTING	4-6
LOWER UNIT - ELECTRIC SHIFT	7-7	WIRE & CONNECTOR REPAIR	4-7
LOWER UNIT - MECHANICAL SHIFT & HYDRAULIC ASSIST	7-22	<b>VARIABLE RATIO OILING (VRO &amp; VRO2) SYSTEM</b>	5-2
LOWER UNIT - MECHANICAL SHIFT & SLIDING CLUTCH DOG	7-35	BREAK-IN AND THE VRO SYSTEM	5-2
REMOTE CONTROLS - EARLY MODEL SINGLE LEVER SHIFT BOX	9-7	DESCRIPTION & OPERATION	5-2
REMOTE CONTROLS -		VRO SYSTEM TROUBLESHOOTING	5-3
SINGLE LEVER HYDRO-ELECTRIC SHIFT BOX	9-2	VRO2 PICK-UP & OIL SUPPLY HOSE	5-8
STARTING SYSTEM	4-51	VRO2 PULSE LIMITER	5-9
TRIM/TILT - MECHANICAL (MODELS THRU 1984)	8-9	VRO2 PUMP ASSEMBLY (FUEL & OIL PUMP)	5-9
TRIM/TILT - ELECTRICAL (MODELS THRU 1984)	8-12	VRO2 SYSTEM VERIFICATION & TROUBLESHOOTING	5-5
TRIM/TILT - 1985-91 MODELS	8-15	VHF-FM RADIO	1-10
TYPE I CD FLYWHEEL MAGNETO - 65, 70 & 75 HP MODELS	4-14	<b>VRO SYSTEM TROUBLESHOOTING</b>	5-3
TYPE I CD FLYWHEEL MAGNETO -		CHECKING - GENERAL	5-3
85, 115, 135 & 140 HP MODELS	4-16	CHECKING FUEL & OIL CIRCUITS	5-3
TYPE I CD FLYWHEEL MAGNETO -		CLEANING THE VACUUM PULSE HOSE	5-4
150, 175, 200 & 235 HP MODELS	4-19	ENGINE MOUNTED FUEL FILTER	5-4
TYPE II CD FLYWHEEL MAGNETO -		FUEL LINE VACUUM TEST	5-5
3 CYLINDER MODELS (60/70/75 HP)	4-22	HORN SOUNDS CONTINUOUSLY ON 3-CYL & V4 MODELS -	
TYPE II CD FLYWHEEL MAGNETO - V4 MODELS		PRIOR TO 1988	5-3
(85/90/100/110/115/120/140 HP)	4-25	LOW OIL LEVEL WARNING HORN SOUNDS - ALL MODELS	5-3
TYPE II CD FLYWHEEL MAGNETO -		VACUUM HOSE CHECK	5-4
V6 MODELS (150/175/200/225/235)	4-27	VRO PUMP SERVICE	5-4
TYPE III CD	4-31	WARNING HORN CHECK	5-4
VRO SYSTEM	5-3	WARNING HORN SOUNDS CONTINUOUSLY -	
VRO2 SYSTEM	5-5	V6 MODELS PRIOR TO 1988 & ALL 1988 MODELS	5-3
<b>TUNE-UP</b>	2-26	VRO2 PICK-UP & OIL SUPPLY HOSE	5-8
COMPRESSION CHECK	2-27	SERVICING	5-8
COOLING SYSTEM MAINTENANCE	2-34	VRO2 PULSE LIMITER	5-9
DE-CARBONING THE PISTONS	2-27	SERVICING	5-9
FUEL SYSTEM MAINTENANCE	2-34	VRO2 PUMP ASSEMBLY (FUEL & OIL PUMP)	5-9
IGNITION & ELECTRICAL SYSTEM MAINTENANCE	2-33	OVERHAUL	5-10
INTRODUCTION	2-26	REMOVAL & INSTALLATION	5-9
SPARK PLUG WIRES	2-32	<b>VRO2 SYSTEM VERIFICATION &amp; TROUBLESHOOTING</b>	5-5
SPARK PLUGS	2-29	CHECKING THE LOW OIL WARNING CIRCUIT	5-6
TUNE-UP SEQUENCE	2-26	CHECKING THE NO OIL WARNING CIRCUIT	5-6
<b>TUNE-UP SEQUENCE</b>	2-26	TESTING THE VRO2 FUEL/OIL PUMP CIRCUITS	5-6
<b>TYPE I - CAPACITOR DISCHARGE (CD) FLYWHEEL</b>		TESTING THE VRO2 PUMP FOR SELF-PRIMING	5-6
<b>MAGNETO SYSTEMS</b>	4-12	<b>WATER FLOW DIAGRAMS</b>	5-22
DESCRIPTION & OPERATION	4-12	1988-91 V4 MOTORS	5-22
IDENTIFICATION	4-12	1988-91 V6 MOTORS	5-22
SAFETY WORDS	4-13	<b>WATER PUMP</b>	
SERVICE	4-13	INSPECTION & OVERHAUL	5-21
SPECIAL EQUIPMENT & ADVICE	4-13	LOWER UNIT - ELECTRIC SHIFT	7-10
TROUBLESHOOTING - 65, 70 & 75 HP	4-14	LOWER UNIT - MECHANICAL SHIFT & HYDRAULIC ASSIST	7-25
TROUBLESHOOTING - 85, 115, 135 & 140 HP	4-16	LOWER UNIT - MECHANICAL SHIFT & SLIDING CLUTCH DOG	7-34
TROUBLESHOOTING - 150, 175, 200 & 235 HP	4-19	REMOVAL & INSTALLATION	5-18
<b>TYPE II - CAPACITOR DISCHARGE (CD)</b>		<b>WHERE TO BEGIN</b>	1-2
<b>FLYWHEEL MAGNETO SYSTEMS</b>	4-22	WINTERIZATION	2-38
CHECKING THE SYSTEM	4-22	PREPPING FOR STORAGE	2-39
DESCRIPTION & OPERATION	4-22	STORAGE CHECKLIST	2-39
IDENTIFICATION	4-22	WHERE TO STORE YOUR BOAT & MOTOR	2-39
SERVICE	4-22	WIRE & CONNECTOR REPAIR	4-7
TROUBLESHOOTING - 3 CYLINDER MODELS (60/70/75 HP)	4-22	<b>WIRING DIAGRAMS</b>	4-62
TROUBLESHOOTING - V4 MODELS (85/90/100/110/115/120/140 HP)	4-25	INDEX	4-62
TROUBLESHOOTING - V6 MODELS (150/175/200/225/235)	4-27	<b>ZINCS</b>	2-21
<b>TYPE III - CAPACITOR DISCHARGE IGNITION SYSTEMS</b>	4-30	INSPECTION	2-21
DESCRIPTION & OPERATION	4-30	SERVICE	2-21
IDENTIFICATION	4-30	<b>2-STROKE ENGINE OIL</b>	2-12
SERVICING	4-43	FILLING	2-12
TROUBLESHOOTING	4-31	FUEL/OIL RATIO	2-12
		OIL INJECTION	2-13
		OIL RECOMMENDATIONS	2-12
		PRE-MIX	2-12