

ELECTRIC OUTBOARDS 1974-1999

E2BS	36" 12V	1974-76	BHL4T	42" 24V	1987	BH2TG	36" 12V	1998
EB12S	36" 12V	1974-76	TH2T	36" 12V	1987	BHL2TG	42" 12V	1998
E2TS	36" 12V	1975-76	BF2TY	36" 12V	1988	BHL4G	42" 24V	1998
E4BS	36" 24V	1975-76	BF2Y	36" 12V	1988	BHL4TG	42" 24V	1998
E4TS	36" 24V	1975-76	BF4Y	36" 24V	1988	HBF2S	36" 12V	1998
EB14S	36" 24V	1975-76	BFL2TY	42" 12V	1988	HBFL2S	42" 12V	1998
ET12S	36" 12V	1975-76	BFL4Y	42" 24V	1988	TH2TG	36" 12V	1998
ET14S	36" 24V	1975-76	BH2TY	36" 12V	1988	TH2TSG	28" 12V	1998
EB52B	36" 12V	1977-82	BHL2TY	42" 12V	1988	TH4TG	36" 24V	1998
EB54M	36" 24V	1977-82	BHL4Y	42" 24V	1988	BF2TW	36" 12V	1999
EB82B	36" 12V	1977-82	TH2Y	36" 12V	1988	BF2W	36" 12V	1999
EB84M	36" 24V	1977-81	BF2A-BF2Y	36" 12V	1989-90	BF4PH	36" 24V	1999
E25	36" 12V	1977-82	BF2TA-Y	36" 12V	1989-90	BF4TPH	36" 24V	1999
E28	36" 12V	1977-82	BF4A-BF4Y	36" 24V	1989-90	BFL2PD	48" 12V	1999
E45	36" 24V	1977-82	BFL2TA-Y	42" 12V	1989-90	BFL2TW	42" 12V	1999
E48C	36" 24V	1977-79	BFL4A-Y	42" 24V	1989-90	BFL4PH	42" 24V	1999
BH4S	36" 24V	1980	BFX2TA-Y	48" 12V	1989-90	BFL4TM	52" 24V	1999
E4HS	36" 24V	1980	BFX4A-Y	48" 24V	1989-90	BFL4TPH	42" 24V	1999
E48R	36" 24V	1980	BH2TA-Y	36" 12V	1989-90	BFX2TW	48" 12V	1999
BH4C	36" 24V	1981	BHL2TA-Y	42" 12V	1989-90	BFX4PH	48" 24V	1999
E4HC	36" 24V	1981	BHL4A-Y	42" 24V	1989-90	BFX4TPH	48" 24V	1999
E48A	36" 24V	1981	TH2A-TH2Y	36" 12V	1989-90	BH2TW	36" 12V	1999
EBL52B	42" 12V	1981	BF2K	36" 12V	1990-94	BHL2TW	42" 12V	1999
EBL84M	42" 24V	1981	BF2TK	36" 12V	1990-94	BHL4TW	42" 24V	1999
EL25B	42" 12V	1981	BF4K	36" 24V	1990-94	BHL4W	42" 24V	1999
EL48A	42" 24V	1981	BF4TK	36" 24V	1990-94	H2T	30" 12V	1999
E4HR-A	36" 24V	1982	BFL2TK	42" 12V	1990-94	H2TS	36" 12V	1999
E25E-D	36" 12V	1982	BFL4K	42" 24V	1990-94	H2TT	36" 12V	1999
E28E-D	36" 12V	1982	BFL4TK	42" 24V	1990-94	H4TS	36" 24V	1999
E45M-B	36" 24V	1982	BFX2TK	48" 12V	1990-94	HB4TS	52" 24V	1999
EB52E-D	36" 12V	1982	BFX4K	48" 24V	1990-94	HBF2G	36" 12V	1999
EB54B-E	36" 24V	1982	BFX4TK	48" 24V	1990-94	HBFL2G	42" 12V	1999
EB82E-D	36" 12V	1982	BH2TK	36" 12V	1990-94	TH2TSG	28" 12V	1999
EBH4R-A	36" 24V	1982	BHL2TK	42" 12V	1990-94	TH2TW	36" 12V	1999
EBL52E-D	42" 12V	1982	BHL4K	42" 24V	1990-94	TH4TW	36" 24V	1999
EBL84B-G	42" 24V	1982	BHL4TK	42" 24V	1990-94			
EL25E-D	42" 12V	1982	TH2K	36" 12V	1990-94			
EL48M-G	42" 24V	1982	TH4TK	36" 24V	1990-94			
BF2V	36" 12V	1983	TH2TK	36" 12V	1991-94			
BF4V	36" 24V	1983	HBF2K	36" 12V	1992-97			
BFL2V	42" 12V	1983	BF2S	36" 12V	1994-97			
BH4V	36" 24V	1983	BF2TS	36" 12V	1994-97			
BL84-G	42" 24V	1983	BF4PV	36" 24V	1994-97			
E2TC	36" 12V	1983	BF4S	36" 24V	1994-97			
EL48-G	42" 24V	1983	BF4TS	36" 24V	1994-97			
ET12-C	36" 12V	1983	BFL2TS	42" 12V	1994-97			
ET12C	36" 12V	1983	BFL4S	42" 24V	1994-97			
BF2P	36" 12V	1984	BFL4TS	42" 24V	1994-97			
BF4P	36" 24V	1984	BFX2TS	48" 12V	1994-97			
BFL2P	42" 12V	1984	BFX4S	48" 24V	1994-97			
BFL4P	42" 24V	1984	BFX4TS	48" 24V	1994-97			
BH4P	36" 24V	1984	BH2TS	36" 12V	1994-97			
TH2P	36" 12V	1984	BHL2TS	42" 12V	1994-97			
BF2H	36" 12V	1985	BHL4S	42" 24V	1994-97			
BF4H	36" 24V	1985	BHL4TS	42" 24V	1994-97			
BFL2H	42" 12V	1985	HBFL2K	42" 24V	1994-97			
BFL4H	42" 24V	1985	TH2TS	36" 12V	1994-97			
BHL4H	42" 24V	1985	TH4TS	36" 24V	1994-97			
TH2H	36" 12V	1985	BF4TPV	36" 24V	1995-97			
BF2B	36" 12V	1986	BFL4PV	42" 24V	1995-97			
BF2TB	36" 12V	1986	BFL4TPV	42" 24V	1995-97			
BF4B	36" 24V	1986	BFX4PV	48" 24V	1995-97			
BFL2TB	42" 12V	1986	BFX4TPV	48" 24V	1995-97			
BFL4B	42" 24V	1986	TH2TSS	28" 12V	1996-97			
BH2TB	36" 12V	1986	BF2G	36" 12V	1998			
BHL2TB	42" 12V	1986	BF2TG	36" 12V	1998			
TH2B	36" 12V	1986	BF4PP	36" 24V	1998			
BF2T	36" 12V	1987	BF4TPP	36" 24V	1998			
BF2TT	36" 12V	1987	BFL2TG	42" 12V	1998			
BF4T	36" 24V	1987	BFL4PP	42" 24V	1998			
BFL2TT	42" 12V	1987	BFL4TPP	42" 24V	1998			
BFL4T	42" 24V	1987	BFX2TG	48" 12V	1998			
BH2TT	36" 12V	1987	BFX4PP	48" 24V	1998			
BHL2TT	42" 12V	1987	BFX4TPP	48" 24V	1998			

B = Bow Mount
F = Foot Control
H = Hand Control
T = Transom Mount